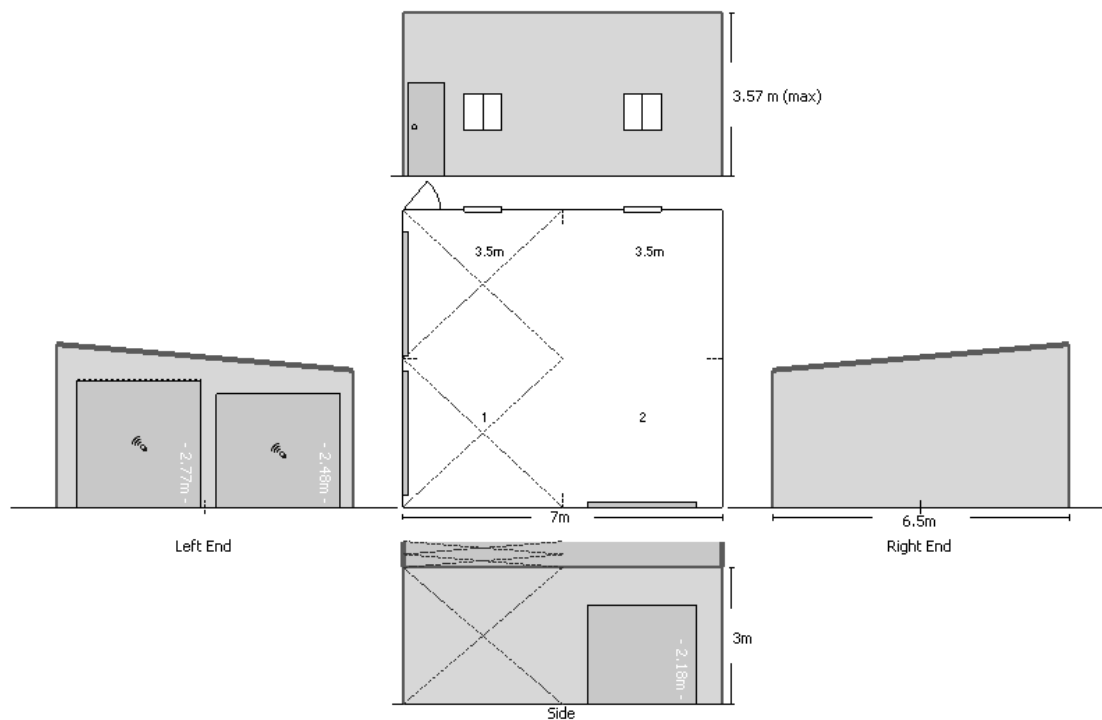


STEEL BUILDING RECOMMENDED INSTRUCTION MANUAL

Frame First Method

**Project by:**

Dinky-Di-Sheds
1800 785 224

For:

Dinky Di Sheds Australia - Skillion no knee braces

At:

34 Something Street
Something, 4350

Job Number:

Australia - Skillion No Nnee Nraces

Table of Contents

1	Disclaimer.....	3
2	General Notes to be read before using this Manual.....	3
3	Glossary of Terms.....	6
4	Diagram of Component Assembly-Components list indicative only	8
5	Guide to the Installation of Temporary Bracing	9
6	Components.....	10
7	Guide in using the Instruction Manual	16
8	Start of Project	17
9	Profile	17
10	Foundation	18
11	Marking Out the Building.....	18
12	Preassembly of Wall Girts and Roof Purlins.....	19
13	Fitting of Column with 3Fold Mono Bracket.....	20
14	Fitting of 3Fold Eave Purlin Bracket to 3Fold Mono Bracket	21
15	Fitting of Eave Purlin Bracket Cleat to 3Fold Mono Eave Purlin Bracket.....	21
16	Fitting of Columns with 3Fold Haunch Bracket.....	22
17	Fitting of 3Fold Haunch Bracket with 3Fold Eave Purlin Bracket.....	23
18	Fitting of Eave Purlin Bracket Cleat to 3Fold Eave Purlin Bracket	24
19	Portal Frame Assembly	25
20	Standing the First Portal Frame Assembly.....	26
21	Fitting of Columns with Base Cleat for Slab Application.....	27
22	Installation of Endwall Mullion	29
23	Standing The Second Portal Frame Assembly.....	29
24	Standing All Portal Frame Assembly	30
25	Fitting of C-Eave Purlin at End Column	30
26	Fitting of C-Eave Purlin at Intermediate Column	31
27	Fixing of Roof Purlins	33
28	Fixing of Endwall Girts.....	34
29	Fixing of Sidewall Girts.....	35
30	Fixing of Strap Bracing.....	36
31	Installation of Endwall Roller Door Frame	38
32	Installation of Endwall Roller Door Frame	40
33	Installation of Sidewall Roller Door Frame	42
34	Fixing of Sidewall Sheets.....	44

35	Fixing of Endwall Sheets.....	45
36	Fixing of Gutter	46
37	Fixing of Roof Sheets.....	47
38	Fixing of Flashings	49
39	Fixing of Openings.....	51
40	Fixing of Downpipe	51
41	Installation of Window.....	52
42	Installation of Personal Access Door.....	54
43	Completion.....	56

1 Disclaimer

Important Disclaimer on this Instruction Manual

- a. This document is to be used and read in conjunction with the plans, drawings and specifications generated by MultiBuild program for this specific job.
- b. Date of Issue – Wednesday, 21 August 2024
- c. Conditions of Use:
By using this guide, you acknowledge and agree that your use is subject to the terms and conditions in this guide. It is your responsibility to ensure that the design you use, the products you have purchased, your site and structural limitations, your building and construction capabilities are appropriate for your needs.
- d. Use of Recommended Genuine Materials:
Structure in this manual should only be constructed using the recommended STRAMIT products or approved third party components. Any warranty can only apply to you if you use the recommended genuine STRAMIT products or approved third party products and Method of Construction recommended in this Manual.
- e. Check of Delivery:
It is important that all materials delivered to site have been checked against the Bill of Materials (BOM) before starting on the project to ensure all components have arrived, are of good quality and ready for installation.
- f. Limitation of Liability
The information contained in this manual is as far as possible accurate at the date of publication, however, before application in a particular situation, FBHS (AUST) Pty Ltd recommends that you obtain qualified expert advice confirming the suitability of product(s) and information in question for the application proposed as you accept the responsibility and risks. Whilst accepting its legal obligations, be aware however that to the extent permitted by law, FBHS (AUST) Pty Ltd disclaims all liability (including liability for negligence) from all loss and any damage, including damage to goodwill and any loss due to delay resulting directly or indirectly from the use of the information provided in this guide.

2 General Notes to be read before using this Manual

Governing Code: National Construction Code Series (Building Code of Australia)
Loading to AS1170 – Parts 0, 1, 2 and 3

2.1 Things to do before you commence construction

- a. It is recommended to obtain professional advice to ensure your needs are adequately met.
- b. Check with your local government of any approval or restriction requirements. It is your responsibility to ensure that all approvals required are obtained.

2.2 Safety Advice – Important

DISCLAIMER: This is a general safety advice. Refer to relevant state workplace authority website www.safeworkaustralia.gov.au for advice on specific items.

NOTE: Do not rely on this guide as exhaustive of all hazards that may exist on a construction site.

Construction hazards must be assessed for risk and controls put in place to reduce the risk identified before commencing the work. This guide is intended to provide an outline of some of the possible risks in erecting a shed or the like but it is not an exhaustive list.

POSSIBLE RISKS:

1. Working at heights

- a. Try to complete as much of the construction work as possible on the ground
- b. Where a person must work at height, appropriate fall prevention devices e.g. temporary work platforms, scaffolds or guard rails are possible controls you may be able to put in place
- c. If the controls at (b) are not practical then a safety harness or safety net may need to be considered
- d. Any scaffolding, temporary structures or planks should be secured
- e. Any ladder used is fit and appropriate for the task and correctly set up
- f. Appropriate non-slip footwear is worn
- g. Appropriate head protection (hard hat with chin strap) is worn

2. Personal protective equipment. Anyone undertaking construction work should wear appropriate:

- a. Eye protection (safety glasses)
- b. Hearing protection (ear plugs, ear muffs)
- c. Hand protection (gloves)
- d. Foot protection (safety shoes / boots)
- e. Head protection (hard hat)
- f. High visibility clothing
- g. Sunscreen

3. Appropriate tools for the task. Anyone using tools while undertaking construction should be properly trained in the operation of the tools required.

4. Manual handling. These are some basic principles to be observed prior to carrying out a manual handling operation

- a. Ensure that the person lifting the object is aware of its weight and is capable of lifting the object
- b. Make sure the route is clear of obstructions
- c. Make sure there is somewhere to put the load down wherever it is to be moved to
- d. Stand as close to the load as possible and spread your feet to shoulder width
- e. Bend your knees and try to keep the back's natural, upright posture
- f. Grasp the load firmly as close to the body as you can
- g. Use the legs to lift the load in a smooth motion as this offers more leverage reducing the strain on your back
- h. Carry the load close to the body with the elbows tucked into the body
- i. Avoid twisting the body as much as possible by turning your feet to position yourself with the load
- j. Heavy or awkward loads should be moved using a mechanical aid

5. Noise. While undertaking construction work, consideration should be given to:

- a. Isolating noisy work and restricting access to noisy areas
- b. Organising so that the time spent in noisy areas is limited

- c. Using tools with lower noise emissions
 - d. Use of earplugs or earmuffs
- 6. Working Space.** Due to the size of structures and the component parts, consideration should be given to the need for sufficient working space while undertaking construction.
- 7. Electricity / Power Tools.** In each state or territory, there are specific requirements for management of electrical risks. The information below is an overview of the requirements for electricity safety on residential construction sites.
- a. Flexible (Extension) Cords
 - i. Cords must be used as per the manufacturer's instructions
 - ii. Cords should be located and used in a manner that protects them from damage
 - b. Residual Current Device (RCD's)
 - i. RCD's should be used "in line" with a switchboard
 - ii. If a portable RCD is used, it is recommended that the RCD be connected directly to the switchboard depending on the manufacturer's code rating
 - iii. Portable RCD's should be tested daily before use and then every three months
 - c. Testing and Tagging. Equipment shall be tested and tagged
 - i. When purchased and prior to use (supplier responsible for initial testing)
 - ii. Before a return to use after repair
 - iii. Testing and tagging should be done every three months for portable electrical equipment
 - d. Switchboards
 - i. Must be able to withstand possible damage
 - ii. Be enclosed and have no exposed live parts
 - iii. Be connected to incoming electrical supply by direct method
 - iv. Must be stable when freestanding
- 8. Light.** The construction of a shed or the like should only be undertaken with appropriate lighting. Construction should commence during the day or in an area with sufficient lighting.
- 9. Slips / Trips.**
- a. All access routes are kept clear of materials and debris
 - b. All leads kept clear of ground or covered
 - c. All surfaces used for access kept dry in a good condition
- 10. Engaging a Contractor in Constructing a Shed.** The contractor undertaking the construction of a shed for the customer shall have appropriate systems in place to meet the health and safety obligations set out in state and territory legislation.

Check with your local workplace health and safety authority for measures required to be put in place prior to and during construction. It is the responsibility of the builder, erector and or installer to ensure all safety work practices are in place. The safety of the whole site has to be maintained at all times. Due consideration has to be given to site safety in regard to locations of bracing and pegs.

2.3 Maintenance Guide

Refer to Stramit website for maintenance guide and requirements. Consult the guide for maintenance, handling and other technical information you may require.

2.4 Descriptions of Products

All specifications, drawings, data and dimensions in this manual are approximations only. Refer to the Engineering Plans and Specifications with this manual.

3 Glossary of Terms

Barge Capping - A flashing attached to the top of end wall cladding and over the roof sheets to cover the gap between the wall and roof cladding.

Base Cleat – A punched angle bracket attached to the base of a C-Purlin column web and fastened to concrete slab or concrete footing

Bolted Frame – A portal frame with Bolt type fasteners.

Bolts – A fastener type for bolted frame application

Column – A C-Purlin component laid vertically and attached to C-Purlin Rafter with a haunch bracket

Corner Flashing – A flashing type to cover the gap between two intersecting sheeting or structural members for weather protection.

Cover Flashing – A flashing type to cover the open side of a C-Purlin Eave Trimmer, Rafter or Column

Eave Trimmer - A C-Purlin component attached to the end of Rafter with eave trimmer bracket for roof sheeting and gutter attachment.

Eave Trimmer Flashing - A flashing type to cover the C-Eave Trimmer.

End Wall Girt – A Tophat or Z-Purlin attached to Endwall Girt Bracket. Endwall girt is flushed to the outside face of the endwall column.

End Wall Girt Bracket – An angle bracket attached to the flange of a C-Purlin End Column to support endwall girt.

End Wall Mullion – A C-Purlin Column rotated 90 degree to the End Rafter and is offset from the slab edge by the width of the endwall girt.

Fly Brace – A metal strap brace attached to the flange of a C-Purlin Column/Rafter, wraps around the Column/Rafter and attached to the lip/flange of a wall girt/purlin.

Gable Angle Trim – An angle bracket attached to purlin to support the top end of wall cladding on the low end of the roof.

Gable Eave Trimmer Bracket – A bracket attached to the lower end of the rafter to support the C-Eave Trimmer

General Purpose Bracket – A pre-punched angle bracket to attach to various applications.

Gutter – A rollformed rainwater product that attaches to the lower end of the roof for water drainage.

Haunch Bracket – 3Fold

A 3Fold bracket bolted to outer face web of column and rafter.

Leanto Eave Purlin Bracket-3Fold

Folded bracket bolted to webs of Column and Eave Purlin to support the Eave Purlin.

Mono Bracket – 3Fold

A 3Fold Mono bracket that connects the Rafter to the Column on the high side attached to the webs.

Mullion Fixing Angle – It is an angle bracket that has multiple uses. It can be for an attachment of the end mullion to the rafter or attachment of a leanto rafter to the flange of a main column.

Personal Access Door Jamb – A folded bracket that attaches to either the next wall girt above the door opening or the C-Purlin eave purlin.

Portal Frame – A frame which consists of a C-Purlin column and a C-Purlin rafter attached with haunch and apex bracket to form a portal frame.

Rafter – A C-Purlin member that attaches to the top of a C-Purlin column with a flat or pressed haunch bracket to support the roof purlins.

Ridge Capping – A flashing to cover the gap where two roof sheetings meet at ridge point.

Roller Door Column (end wall) – It is a C-Purlin member positioned as the frame column orientation.

Roller Door Jamb (side wall) – A folded bracket that attaches to either the next wall girt above the door opening or the C-Eave Purlin or tophat Eave Purlin.

Roller Door Header – It is a C-Purlin member above the roller door opening that attaches to the inner web of the header and to the flange of the roller door column with angle bracket.

Roof Purlin – A Z-Purlin or a tophat member that directly attaches to the top flange of a C-Purlin rafter with tek screws or bolt.


Roof Sheeting – It is a metal sheeting profile to cover the roof of the building and attaches to the roof purlins.

Sidewall Girt – A Z-Purlin or tophat that attaches to the flange of a C-Purlin frame column.

Wall Cladding – A metal sheeting profile to cover the walls of the building and attaches to the wall girts.

Window Vertical Frame – A member which is the same as the wall girt material to support a window opening.

4 Diagram of Component Assembly-Components list indicative only

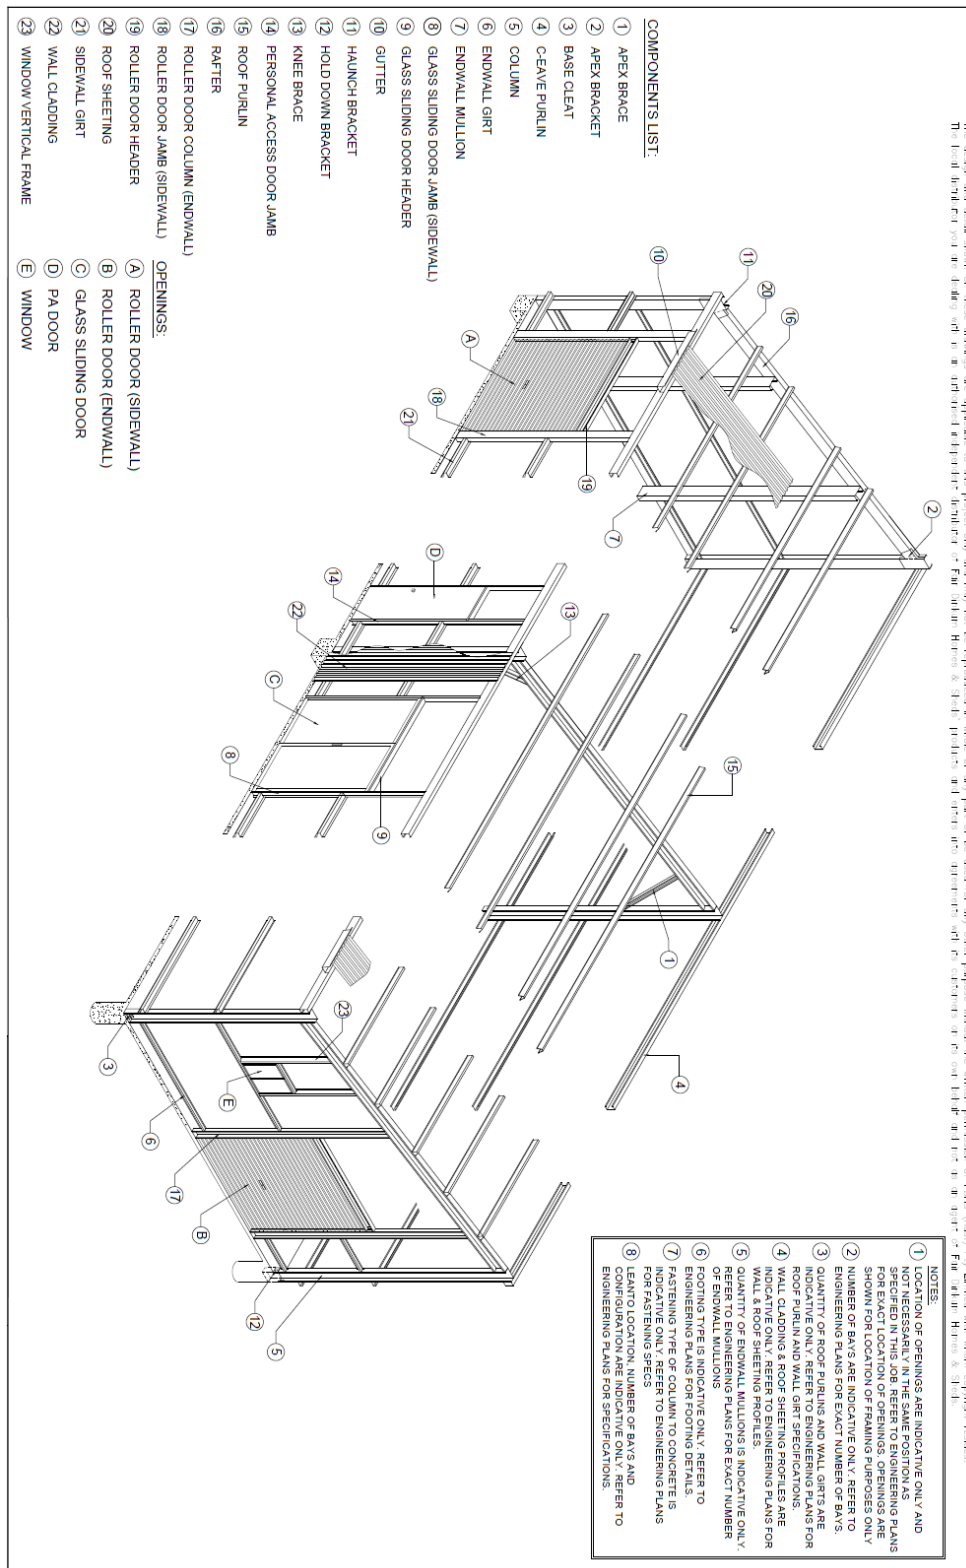

5 Guide to the Installation of Temporary Bracing

NOTES:

BRACING RIGID MEMBERS CAPABLE OF TENSION AND COMPRESSION OR OPPOSING CHAINS OR OPPOSING LOAD RATED RATCHET STRAPS TO BE USED. (RIGID BRACING AS SHOWN ON DIAGRAM) ROPE BRACING SUITABLE ONLY FOR SMALLER STRUCTURES IN IDEAL CONDITIONS.

BRAILING LOCATION: TEMPORARY BRACING TO BE ERECTED AS CLOSE TO 45 DEGREE ANGLE AND FIXED TO THE TOP OF THE COLUMN OR WALLION TO ACHIEVE THE OPTIMUM EFFECTIVENESS. IF THERE IS NOT ENOUGH SPACE FOR A 45 DEGREE ANGLE, THEN 20 DEGREE ANGLE IS TO BE THE MINIMUM ANGLE ALLOWED. REFS TO DIAGRAM. RIGID TEMPORARY BRACING MEMBER TO BE BOLTED TO HEAVY ANGLE BESS, HAMMERED INTO THE GROUND OR TO A BRACKET, MASSORR ANCHORED TO THE SLAB.

BRACING REMOVAL - TEMPORARY BRACING TO REMAIN IN PLACE UNTIL CLADDING IS FULLY INSTALLED WHERE POSSIBLE. IN NO CASE SHOULD

BRACING BE REMOVED UNTIL ALL PURLINS, GIRTS (AND PERMANENT CROSS BRACING WHERE USED) ARE FIXED.

SITE SAFETY - DUE CONSIDERATION TO BE GIVEN TO SITE SAFETY IN REGARD TO LOCATIONS OF BRACING AND PEGS.

GUIDE APPLICATION - TEMPORARY BRACING AS DESCRIBED IS A MINIMUM REQUIREMENT FOR AN AVERAGE, STANDARD SITE CONDITION. PROVIDE ADDITIONAL BRACING FOR MORE SEVERE AND/OR HIGH EXPOSURE SITE CONDITIONS. ADDITIONAL BRACING TO BE USED AS AID WHERE NECESSARY TO ENSURE THAT ENTIRE FRAME IS RIGID THROUGHOUT CONSTRUCTION.

TILT UP METHOD FOR STRUCTURES UNDER 9M SPAN, LESS THAN 3M HIGH AND LESS THAN 12M LONG

- A. ASSEMBLE THE FIRST SIDEWALL FRAME (COMPLETE WITH WALL SHEETING, BRACING AND GUTTER) ON THE GROUND AND LIFT ASSEMBLED SIDEWALL FRAME INTO POSITION.
- FIX OFF TEMPORARY SIDE BRACING TO EACH END (REFER TO DIAGRAM), FIX BASE CLEATS.
- B. ASSEMBLE THE SECOND SIDEWALL FRAME AS PER FIRST SIDEWALL FRAME. LIFT INTO POSITION. FIX OFF TEMPORARY WALL BRACING TO EACH END (REFER TO DIAGRAM) FIX BASE CLEATS.
- C. FIX GABLE END RAFTERS TO COLUMNS TO THE WALLS. PROP APEX UNTIL ENDWALL MILLION AND APEX TEMPORARY BRACE ARE FIRED OFF. IF NO MILLION IS REQUIRED THEN PROP AND BRACE APEX UNTIL CLADDING IS COMPLETE.
- D. INSTALL REMAINING RAFTERS. AS EACH RAFTER PAIR IS INSTALLED, AT LEAST ONE PURLIN PER 3M OF RAFTER LENGTH IS TO BE INSTALLED TO SECURE RAFTERS.
- E. INSTALL REMAINING PURLINS
- F. INSTALL KNEE AND APEX BRACES IF AID WHERE APPLICABLE.
- G. REPEAT FOR LEFTHOTS.



FRAME FIRST METHOD

- A. ASSEMBLE PORTAL FRAMES ON THE GROUND WITH NINE AND APEX BRACES IF AND WHEN APPLICABLE, LIFT THE FIRST PORTAL FRAME ASSEMBLY INTO POSITION.
- FIX OFF TEMPORARY END BRACING (REFER TO DIAGRAM, FIX BASE CLEATS).
- B. PROP EACH UPRIGHT, MIDSPAN AND APEX TEMPORARY BRACE ARE TIED OFF:
- IF NO MULTILINER IS REQUIRED THEIR PROP AND BRACE AREY UNTIL CLADDING IS COMPLETE.
- C. AND AT LEAST ONE PURLIN PER 30' OF RAFTER TO SECURE FRAME ASSEMBLY.
- D. FIX BASE CLEATS, FIX TEMPORARY SIDEWALL BRACING.
- E. STAND REMAINING PORTAL FRAME ASSEMBLY AS PER STEP C, TIEING TEMPORARY SIDE WALL BRACING TO EVERY SECOND BAY, BRACE OTHER END PORTAL FRAME AS PER FIRST PORTAL FRAME.
- F. LIFTAL REMAINING PURLINS AND GIRTS.
- G. REPEAT FOR LEANTOS.

GUIDE TO THE INSTALLATION OF TEMPORARY BRACING

(REFER TO INSTALLATION GUIDE MANUAL FOR THE TWO METHODS OF CONSTRUCTION)

(REFER TO INSTALLATION GUIDE MANUAL FOR THE TWO METHODS OF CONSTRUCTION)

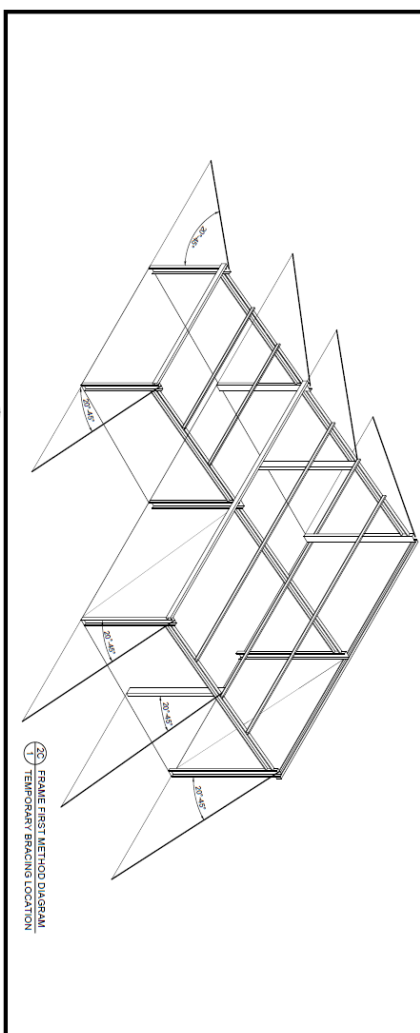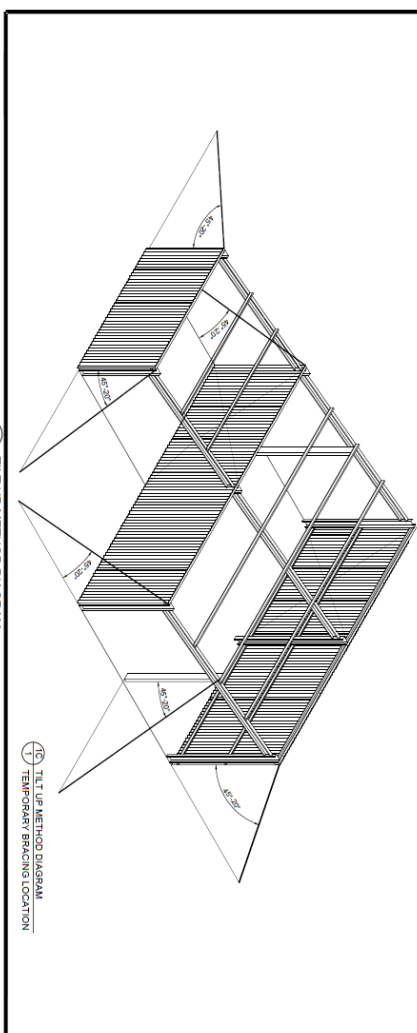

6 Components

Barge Capping

A flashing attached to the top of end wall cladding and over the roof sheets to cover the gap between the wall and roof cladding.




Base Cleat

A punched angle bracket attached to the base of a C-Purlin column web and fastened to concrete slab or concrete footing



Bolted Frame

A Portal Frame with Bolt type fasteners.

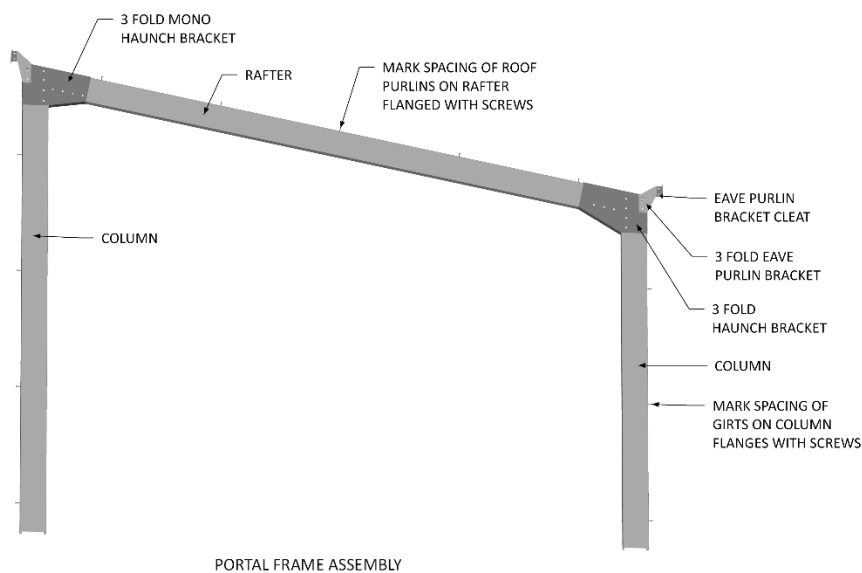

Bolts

A fastener type used for bolted frame application.




Column

A C-Purlin component laid vertically and attached to C-Purlin Rafter with a haunch bracket



Corner Flashing

A flashing type to cover the gap of two intersecting sheeting or structural members for weather protection.

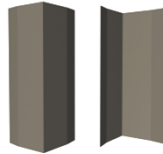

Cover Flashing

A flashing type to cover the open side of a C-Purlin Eave Trimmer, Rafter or Column.




Eave Purlin Bracket - 3Fold

A folded bracket bolted to web of Column and inner web of Eave Purlin to support the Eave Purlin




Eave Purlin Bracket Cleat-3Fold

An L-shaped bracket bolted to 3Fold Eave Purlin Bracket and to inner web of Eave Purlin.

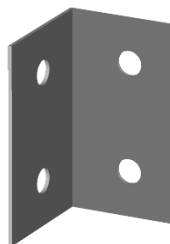


End Wall Girt

A Tophat or Z-Purlin attached to Endwall Girt Bracket. Endwall girt is flushed to the outside face of the endwall column.

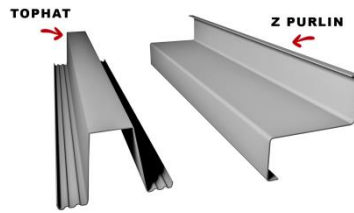


End Wall Girt Bracket

An angle bracket attached to the flange of a C-Purlin End Column to support endwall girt.

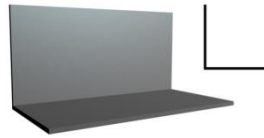


End Wall Mullion

A Column rotated 90 degree to the End Rafter and is offset from the slab edge by the width of the endwall girt.

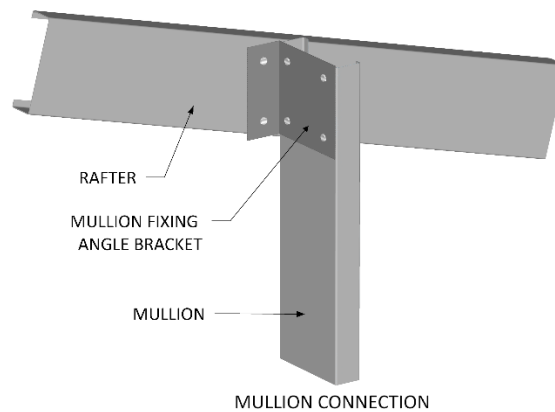


Fly Brace

A metal strap brace attached to the flange of a C-Purlin Column/Rafter, wraps around the Column/Rafter and attached to the lip/flange of a wall girt/purlin.

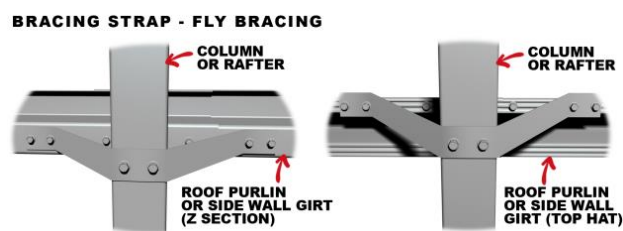


General Purpose Bracket – A pre-punched angle bracket for various applications.

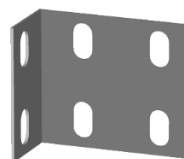


Gutter

A rollformed rainwater product attached to the lower end of the roof for water drainage.

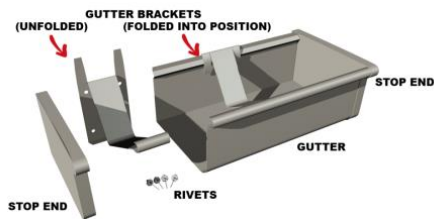


Haunch Bracket – 3Fold

A 3Fold bracket bolted to outer face webs of Column and Rafter.

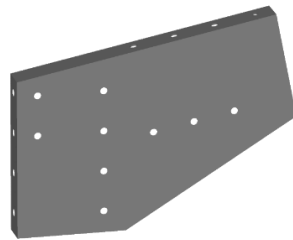


Leanto Eave Purlin Bracket-3Fold

A folded bracket bolted to webs of Column and Eave Purlin to support the Eave Purlin.

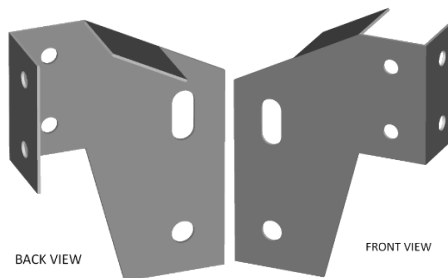


Mono Bracket – 3Fold

A 3Fold Mono bracket that connects the Rafter to the Column on the high side attached to the webs.

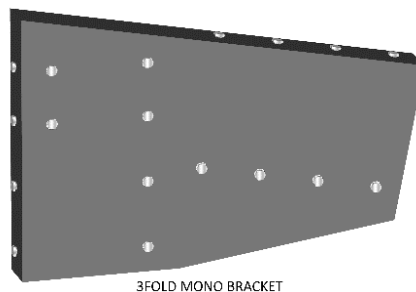


Mullion Fixing Angle

An angle bracket with various usages such as attachment of the C-End mullion to Rafter or attachment of a Leanto Rafter to Main Column.

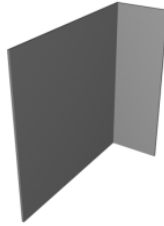


Personal Access Door Jamb

A folded bracket attached to either the next wall girt above the door opening or the C- Eave Purlin. The 2 types are with rebate or without a rebate.

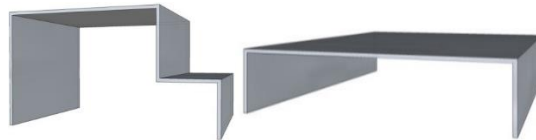

Portal Frame

A frame which consists of a column and a rafter assembled with 3Fold Haunch Bracket and 3Fold Mono Bracket to form a Portal Frame.

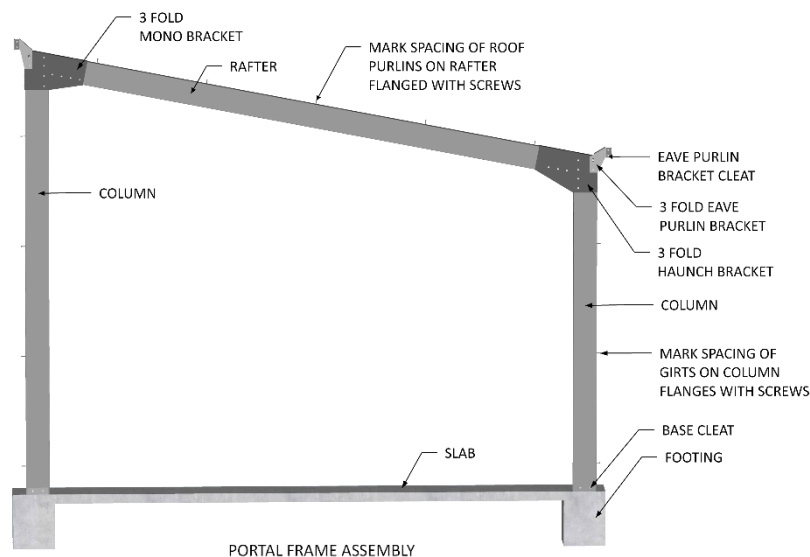

Rafter

A C-Purlin member to support the roof purlin fixed to the top of a column with a haunch bracket and fixed on the high end of the rafter with an apex bracket.




Ridge Capping

A flashing to cover the gap where two roof sheetings meet at ridge point.




Roller Door Column (end wall)

A C-Purlin member that acts as a roller door jamb and is orientated as the frame column.

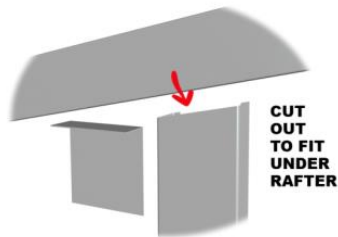

Roller Door Jamb (side wall)

A folded bracket attached to either the next wall girt above the door opening or the C-Eave Purlin or Tophat Eave Purlin.

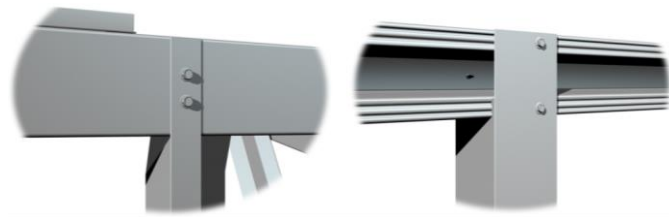

Roller Door Header


A C-Purlin member above the roller door opening attached to flanges of the roller door column to inside web of the header with an angle bracket.



Roof Purlin

A Z-Purlin member or a tophat directly attached to the top flange of a C-Purlin rafter with tek screws or bolt as required.

Z SECTIONS & TOPHATS

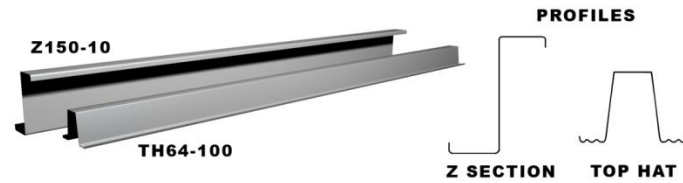

Roof Sheeting


A metal sheeting profile to cover the roof of the building attached to roof purlins.

ROOF & WALL SHEETS



Sidewall Girt

A Z-Purlin or tophat directly attached to the flange of a C-Purlin frame column.

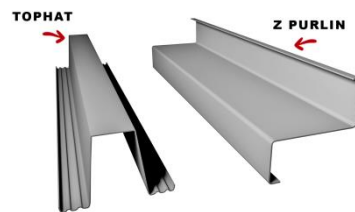

Wall Cladding

A metal sheeting profile to cover the walls of the building attached to wall girts.

ROOF & WALL SHEETS



Window Vertical Frame

A member which is the same as the wall girt material, flanges notched out and flanges attached to sides of the next wall girt below and above the window opening. In the absence of a wall girt above the opening, it is attached to the C-Purlin eave purlin.

7 Guide in using the Instruction Manual

You must read these instructions carefully before starting on the project.

Recommended Tools

- a) Ladder
- b) Plank

- c) Saw Horses
- d) Angle Grinder
- e) Electric Lead
- f) Spirit Level
- g) Drill and Drill Bits for concrete/masonry and steel
- h) Pop Rivet Gun
- i) Safety Glasses
- j) Gloves
- k) Assortment of Hand Tools such as impact driver/tek gun (electrical), power box, nibbler, clamps, hammer and all other tools you require
- l) Socket Set

Check against components delivered and the Bill of Materials.

It is important to check the delivered components against the Bill of Materials. If there is discrepancy with what is received and the BOM, please contact the distributor where you purchased immediately prior to the commencement of the project.

Site Preparation

Prepare the work area for the construction. Clear the work area of obstacles and debris to be a safe place to work in.

8 Start of Project

OTHER TEMPORARY BRACING REQUIREMENTS ARE OMITTED TO ALL THE IMAGES FOR CLARITY. REFER TO “GUIDE TO THE INSTALLATION OF TEMPORARY BRACING”.

The information in this guide is suitable only for: ***‘34 Something Street Something, 4350’*** with the following:

Project Design Criteria Example	
Wind Region	B1
Topography	1.09
Shielding Factor	0.83
Terrain Category	2.76
Importance Level	2

Monopitch Roof structure for a 6.5m span x 7m long x 3m high enclosed garage with 1 personal access door on sidewall, 2 windows on sidewall, 1 roller door on sidewall, 2 roller doors on endwall.


IT IS IMPERATIVE TO REFER TO THE ENGINEERING PLANS SUPPLIED WITH THIS MANUAL FOR SPECIFICATIONS AND DETAILS TO ALL THE CHAPTERS INCLUDED IN THIS MANUAL.

9 Profile

A profile is a set-out of a concrete slab. Build the profile on each corner of the building allowing for enough space to set out the corners of the concrete slab. Nail strings on 4 sides for set-out of the


edges of the concrete slab. The diagonal measurements of the strings from each corner must be equal. Ensure that the strings are square by measuring 300mm on the span side and 400mm on the length side. The measurement of the end points of these 2 measurements should be 500mm. The image shows 3, 4 and 5 to represent the measurements correspondingly. The 4 string lines are equivalent to the slab edges. The intersection of 2 strings is the corner of the slab. The concrete slab dimensions should be the exact dimensions of the building.

The diagonal measurement of the slab is equal to 9.552 meters for the Main Building.

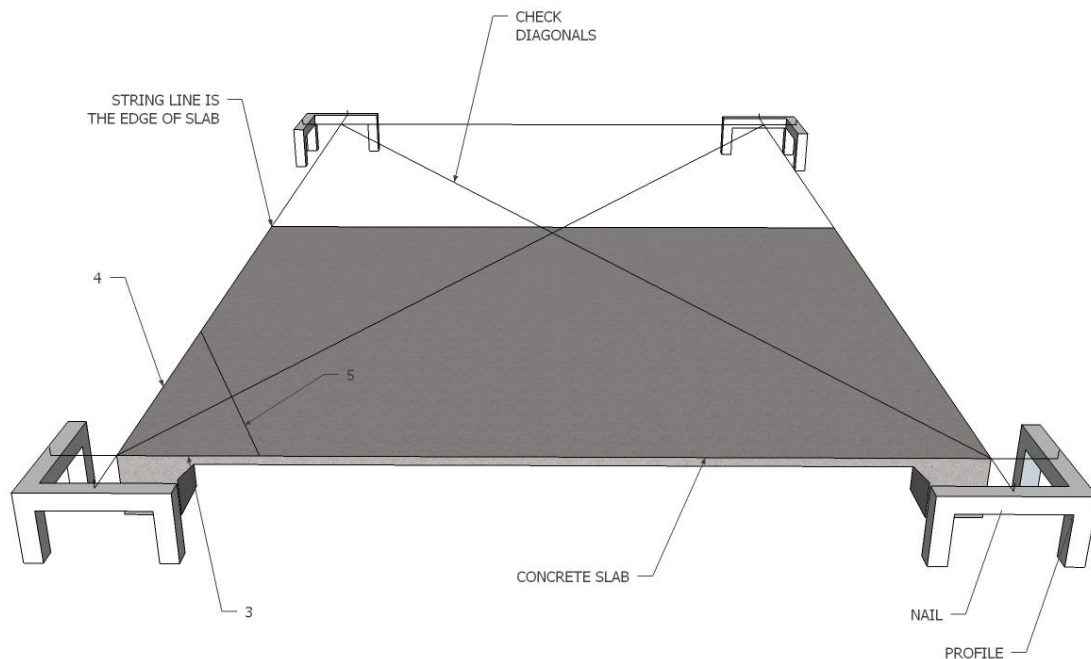

10 Foundation


The concrete slab dimensions should be the exact dimensions of the building. Building dimensions are taken from outside to outside of the wall girts to allow the wall cladding to go past the slab by 25mm. It is very important that the 2 diagonal measurements of the concrete slab be equal, square and level. The concrete slab will be supported by either a block pad or bored or strip footing as required. If slab is present, footings are not centered under the columns.

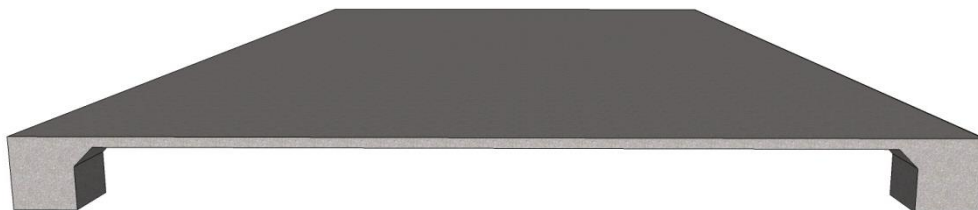

11 Marking Out the Building

Measure the width and the length of the slab and ensure that it is equivalent to the size of the building as per Engineering Plans. Measure the 2 diagonals and ensure that the dimensions are equal, level and square.

Mark out (chalk line) the inside face of the C-Purlin column from the edge of the slab along one side of the length of the building. This distance is equal to the web size of the C-Purlin column and the width of the girt and is referred to as “Frame Dist”. Repeat the procedure to the other side along the length of the building.

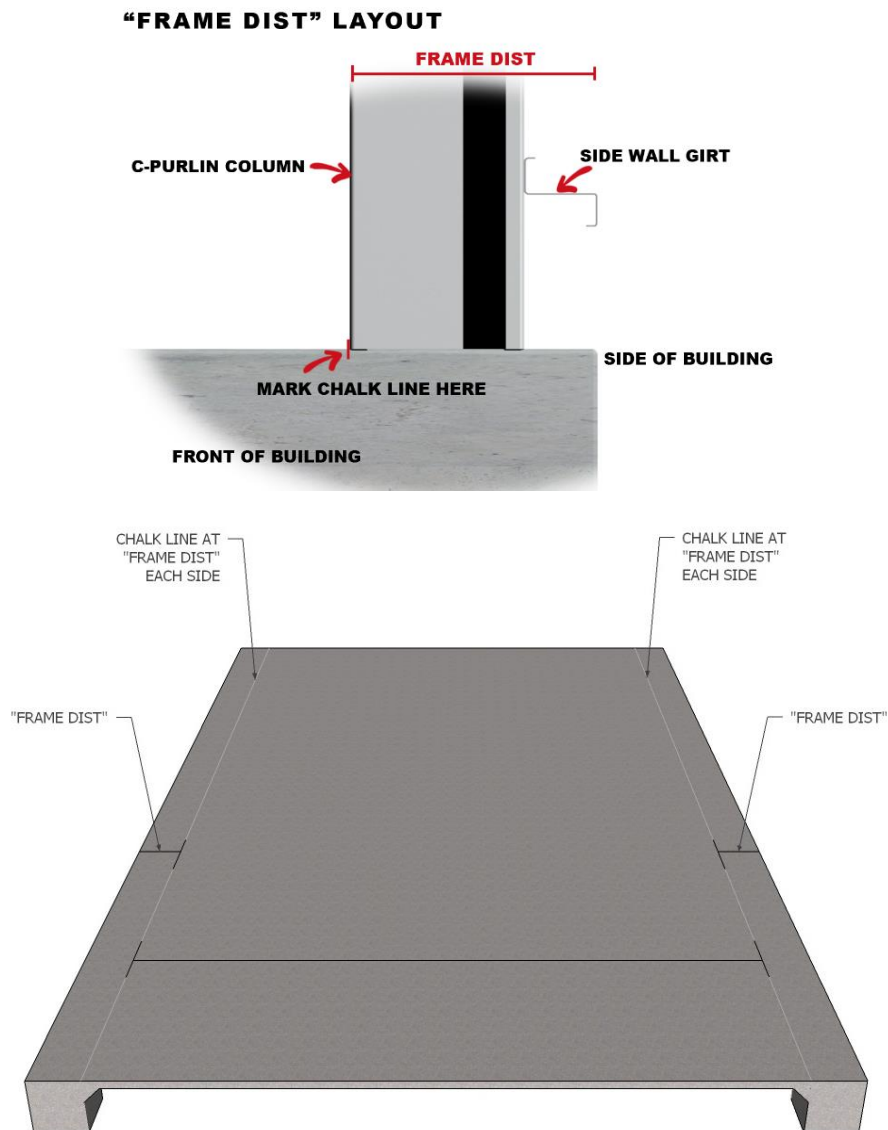

NOTE: For the set-out of the C-Purlin column and the fastening type to the concrete slab, refer to the Bolt Layout Plan or Hold Down Bracket Layout Plan (as required) on the Engineering plans.

The overall length of the building is from outside face of the C-Purlin column on each endwall.

12 Preassembly of Wall Girts and Roof Purlins

Lay out sidewall girts and purlins on the slab. Join and lap two (2) girts with tek screws to suit the length of the building as specified on the Engineering Plans. For ease of handling, it is recommended that joining should be no more than 2 multiples at a time. Refer to the Engineering Plans for tek screw specifications and details. Repeat the same procedure for the purlins.

NOTE: The overlap widths of girts and purlins may not necessarily be the same so it is important to


refer to the Engineering Plans.

NOTE: The number of tek screws may not necessarily be the same for girts and purlins so it is important to refer to the Engineering Plans.



Mark girts with a permanent marker the Intermediate Portal Frame positions as per Engineering Plans. Repeat the same procedure for the purlins. Move aside for later use.

SIDE WALL GIRTS & ROOF PURLINS

OVERLAP CONNECTION DETAIL

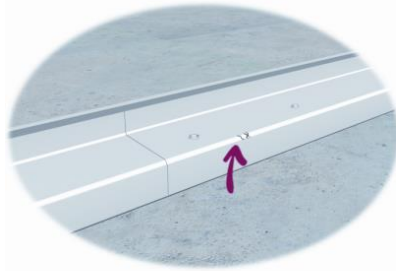


MEASURE & MARK POSITION OF INTERMEDIATE PORTAL FRAMES

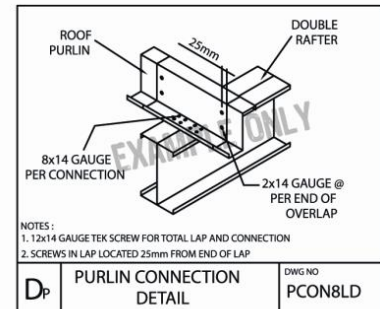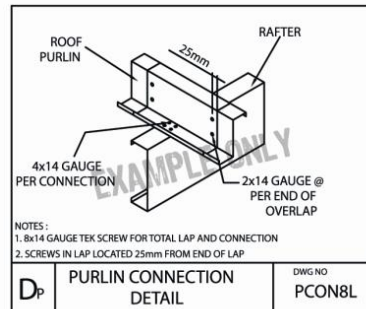


13 Fitting of Column with 3Fold Mono Bracket

Layout the Mono Bracket to the high end of the column on the slab. Attach the Mono Bracket to the high end of the Column. Keep the Mono Bracket temporarily in place with 4 frame tek screws. Bolt the Mono Bracket securely into position. Repeat procedure to the rest of the Columns. Stand Column assembly side by side, measure and mark on the column the position of girts based on the spacing specified on the Engineering Plans. Move aside for later use.

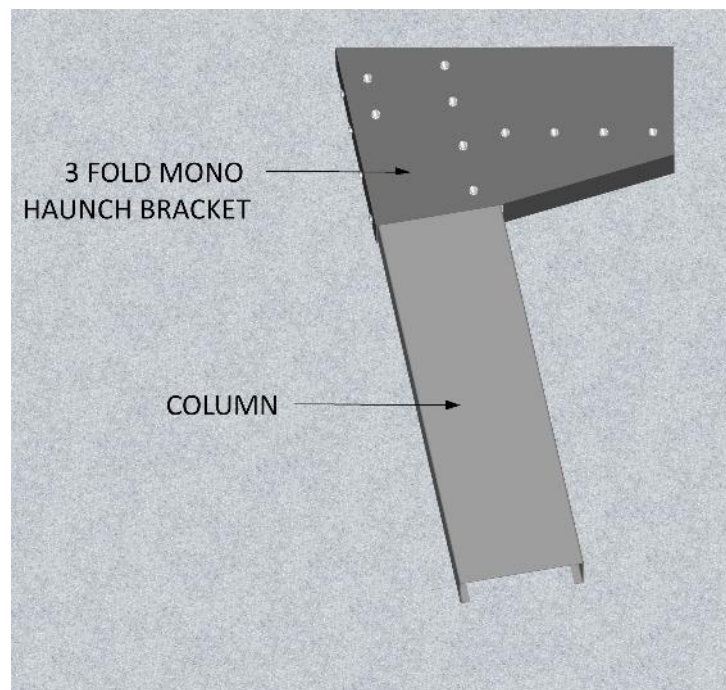


14 Fitting of 3Fold Eave Purlin Bracket to 3Fold Mono Bracket



Layout the Column-Mono Bracket assembly on the slab. Bolt the 3Fold Eave Purlin Bracket to the Column-Mono Bracket assembly to the first 2 holes from the top of the Mono bracket. Repeat procedure to the rest of the Columns.

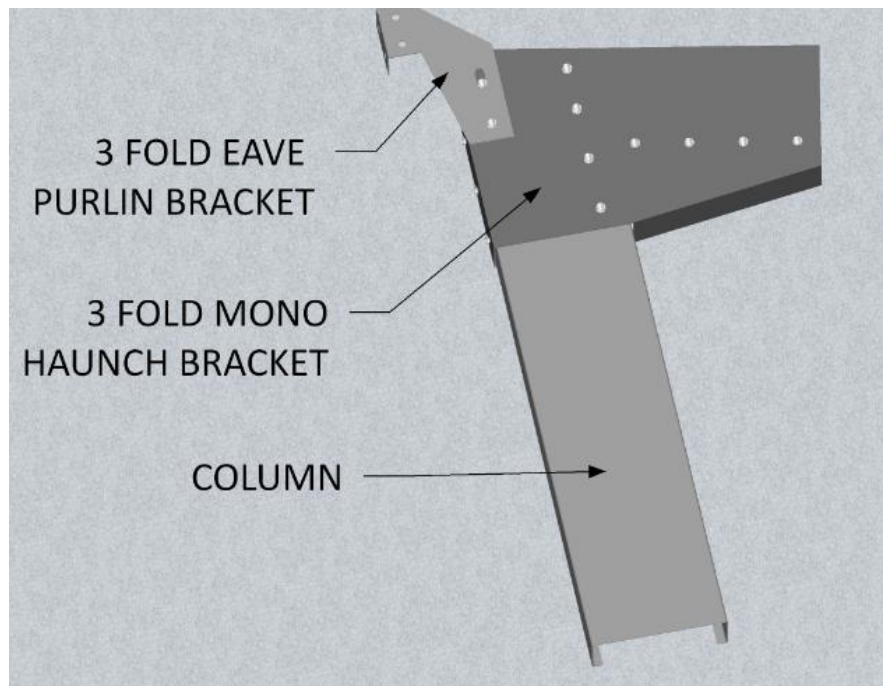

15 Fitting of Eave Purlin Bracket Cleat to 3Fold Mono Eave Purlin Bracket

Layout the Column-Mono Bracket-3Fold Eave Purlin Bracket assembly on the slab. Bolt the Eave Purlin Bracket Cleat to the 3Fold Eave Purlin Bracket. Repeat procedure to the rest of the columns. Stand column assembly side by side, measure and mark on the column the position of girts based on the spacing specified on the Engineering Plans. Move aside for later use.

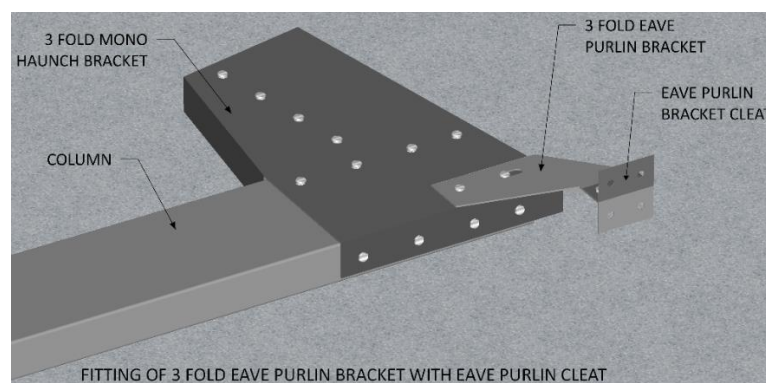


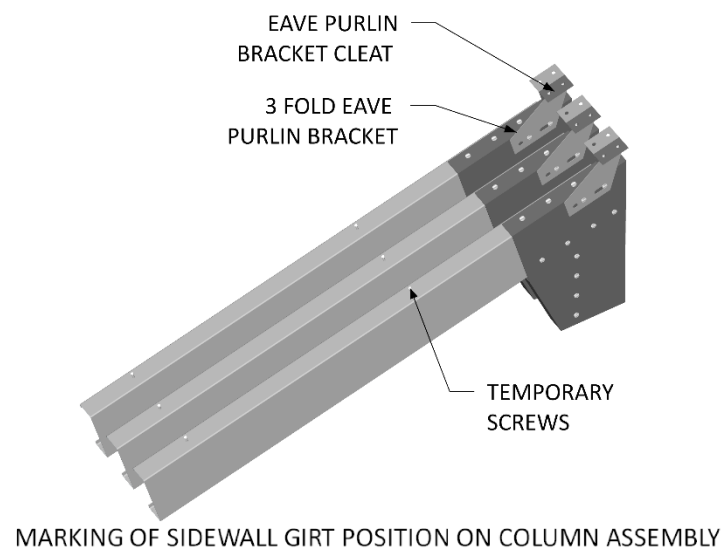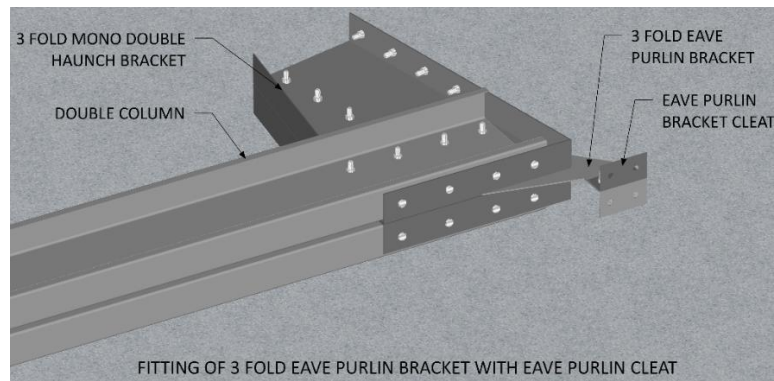

16 Fitting of Columns with 3Fold Haunch Bracket

Layout Columns and Haunch Brackets on the slab. Ensure that the column is orientated at the top end. This can be achieved by matching the punching of the rotated haunch bracket against the punching of the column.

Lay the Column flat on the slab, web face up. Attach the Haunch Bracket to the top end of the column, web face up. Keep the haunch bracket temporarily in place with 2 frame tek screws. Repeat procedure to the rest of the columns.

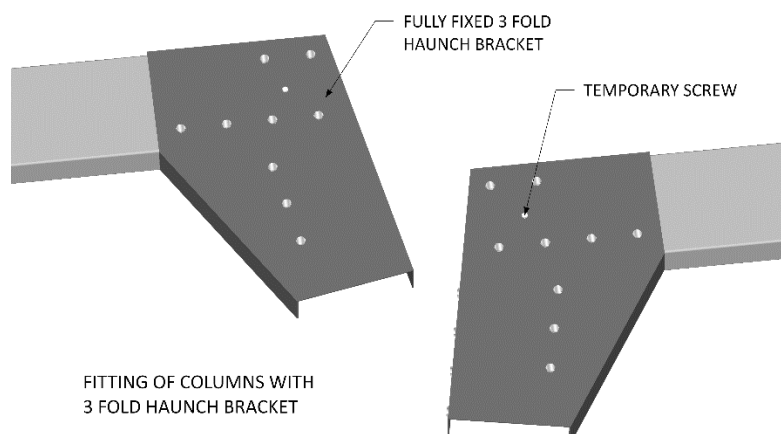


TIP: Layout the haunch brackets web face up to determine the Left and Right bracket. Where the column attachment is on the left, it is the Left Haunch Bracket and where the column attachment is on the right, it is the Right Haunch Bracket.


TIP: IF STRUCTURE HAS MEZZANINE FLOOR AND HAS DOUBLE COLUMNS, IT IS RECOMMENDED TO FIT THE SINGLE MEZZANINE FLOOR BRACKET IN BETWEEN THE COLUMNS WHILST THE ROTATED HAUNCH BRACKET IS BEING FITTED WITH FASTENING TYPE AS PER ENGINEERING PLANS. ENSURE THAT THE MEZZANINE BEARER BRACKET IS FIXED TO THE CORRECT HEIGHT ON THE COLUMN. REFER TO MEZZANINE FLOOR CHAPTER FOR PROCEDURE.

TIP: Single mezzanine floor bracket is used for both single or double mezzanine bearer application.

17 Fitting of 3Fold Haunch Bracket with 3Fold Eave Purlin Bracket

Lay the column as shown and bolt the 3Fold Eave Purlin Bracket to the web side of the 3Fold Haunch Bracket. Refer to Engineering Plans on the height specifications of the Eave Purlin Bracket. Repeat this procedure to the other columns.

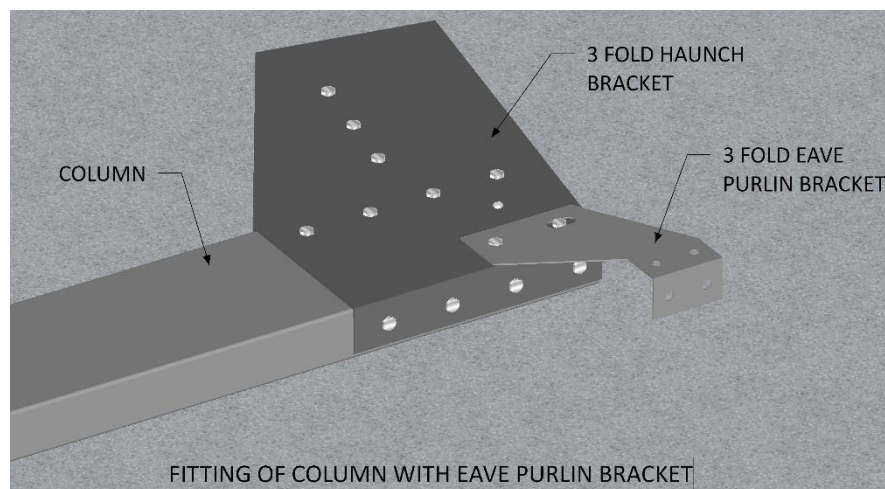

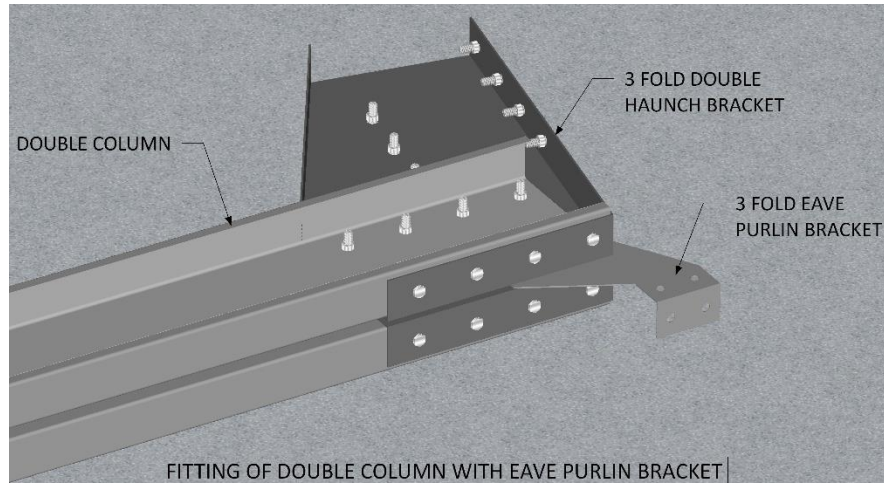




TIP: C-Eave Purlins are butt jointed when attached to 3Fold Eave Purlin Bracket.

18 Fitting of Eave Purlin Bracket Cleat to 3Fold Eave Purlin Bracket

Lay the Column-Haunch Bracket-3Fold Eave Purlin Bracket assembly on the ground. Bolt the Eave Purlin Bracket Cleat to the 3Fold Eave Purlin Bracket. Repeat this procedure to the other columns.

Stand column assembly side by side, measure and mark on the column the position of girts based on the spacing specified on the Engineering Plans. Move aside for later use.

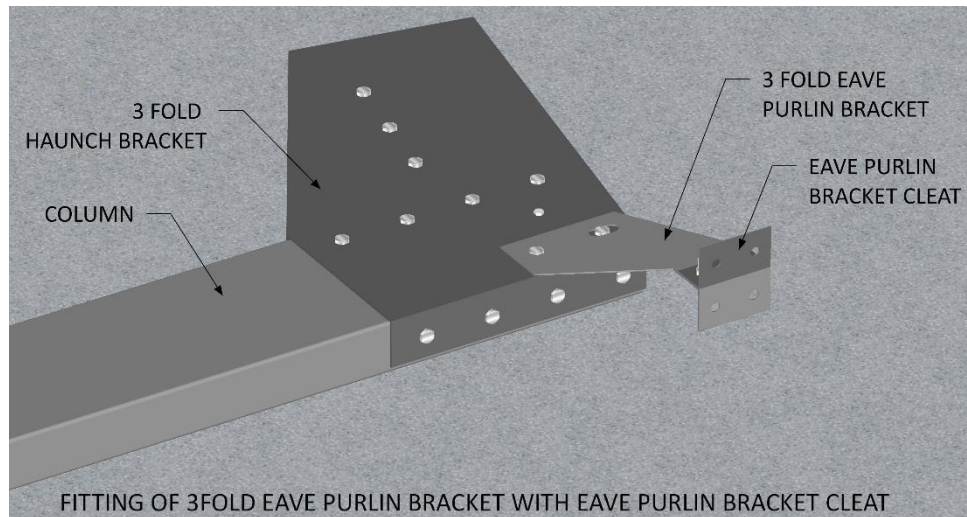

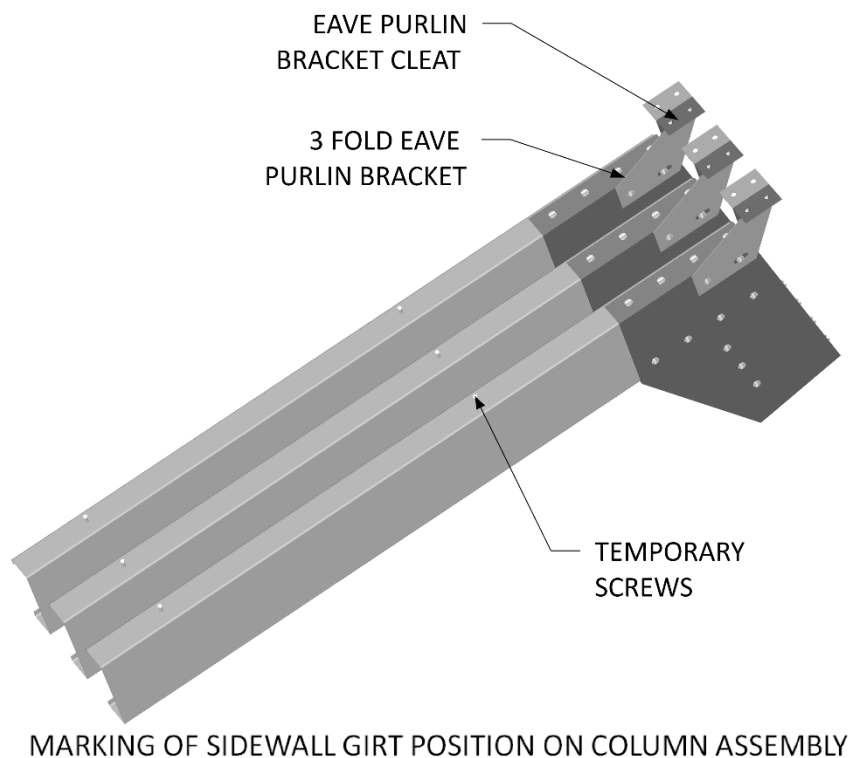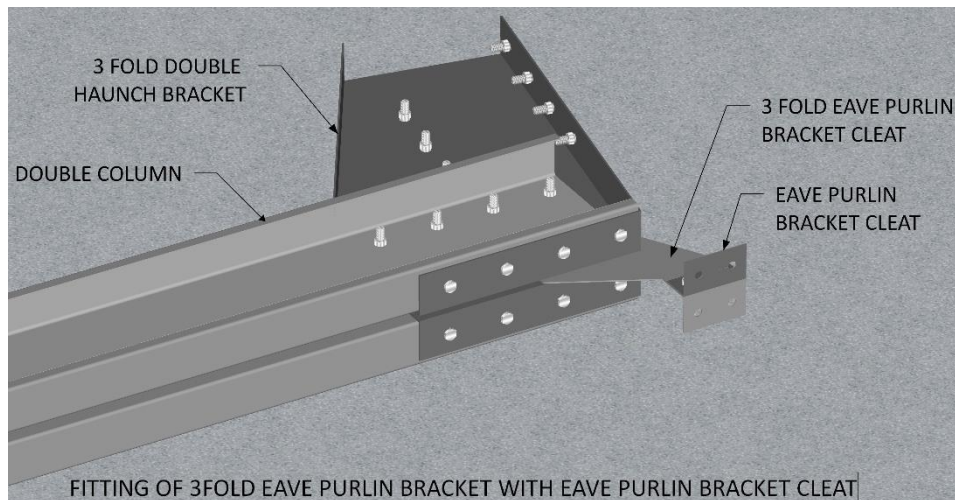

TIP: C-Eave Purlins are butt jointed when attached to 3Fold Eave Purlin Bracket and Eave Purlin Bracket Cleat

19 Portal Frame Assembly

Following the attachment of 3Fold Haunch Bracket, 3Fold Eave Purlin Bracket and Eave Purlin Bracket Cleat to low end Rafter and Column and 3Fold Mono Bracket, 3Fold Eave Purlin Bracket and Eave Purlin Bracket Cleat to high end Rafter and Column, Column and Rafter are now ready to be assembled to form a Mono Portal Frame.

Layout the pre-assembled Column on the ground matching the punching of the rafter to the 3Fold Haunch Bracket and 3Fold Mono Bracket attached to Column.

Attach the Rafter to the Column-Haunch Bracket and Column-Mono Bracket assembly to the low and high ends.


Do not tighten until the overall width of the columns have been checked. Check Mono Portal Frame for square by diagonal measurement then tighten the connections.

Mark the spacing of the Sidewall Girts on the Column flanges, spacing as per the Engineering Plans with the first girt being 250mm above the Column if Column is NOT EMBEDDED. If Column is EMBEDDED, first girt will be 250mm above the Finish Floor Line.

Ensure that all the bolts to the brackets are tightened.

The first Mono Portal Frame Assembly is now complete and ready to stand.

Repeat the procedure to the remaining Columns and Rafters.

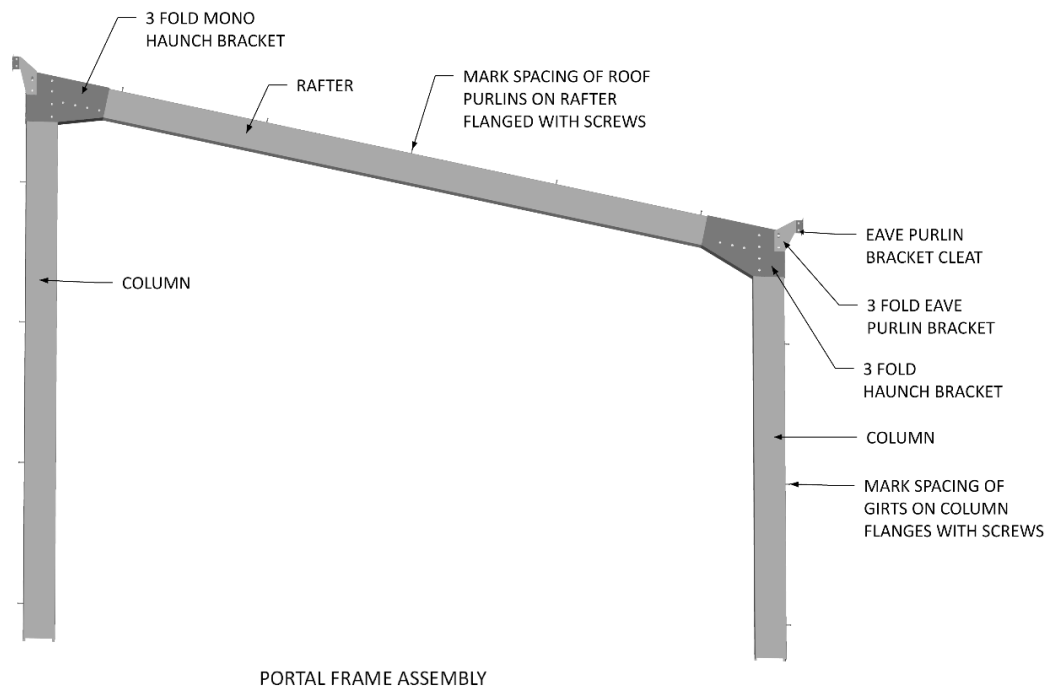


20 Standing the First Portal Frame Assembly



WARNING: DO NOT ATTEMPT TO STAND A PORTAL FRAME ASSEMBLY ON WINDY DAYS. CAUTION SHOULD BE OBSERVED AND SAFETY TO BE THE UTMOST PRIORITY WHEN STANDING A PORTAL FRAME ASSEMBLY.

NOTE: BUILDING CONFIGURATION IS INDICATIVE ONLY. REFER TO ENGINEERING PLANS FOR ACTUAL BUILDING CONFIGURATION AND SPECIFICATIONS.

With the assistance of other installers, lift the first Portal Frame Assembly into position and ensure that the END columns are flush with the edge of the concrete slab. Open side of the Frame to face outside. Position the inside face of the column flange to the chalk line previously marked on the concrete slab. Refer to “Marking Out the Building” chapter for reference of the “chalk line”. Brace and prop both ends and side of the portal frame assembly with the appropriate temporary bracing material tied securely around stakes or equivalent driven into the ground. The portal frame should be supported temporarily until all frames and end mullions are in place to stop the rafters rotating on the haunch brackets. Refer to “Guide to the Installation of Temporary Bracing”

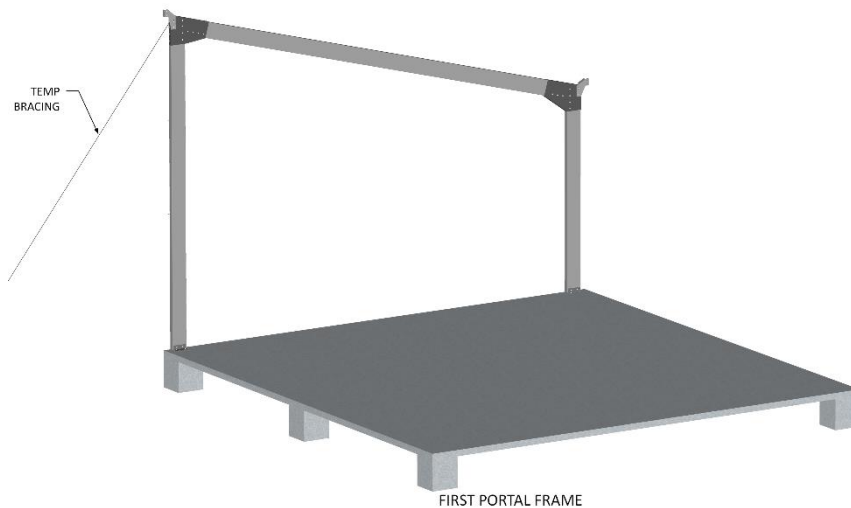



REFER TO 'GUIDE TO THE INSTALLATION OF THE TEMPORARY BRACING'
FRAME CONFIGURATION ARE INDICATIVE ONLY, REFER TO ENGINEERING PLANS FOR ACTUAL BUILDING CONFIGURATION

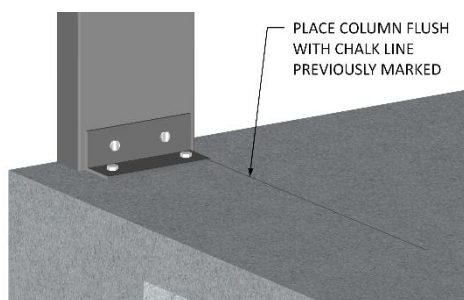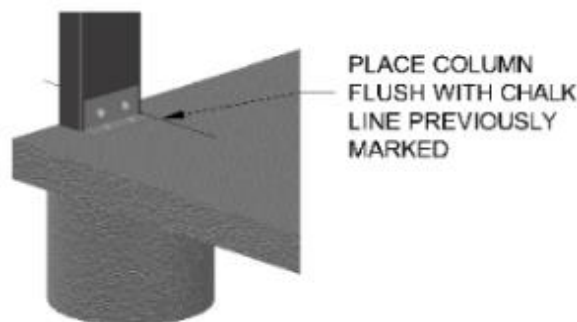


21 Fitting of Columns with Base Cleat for Slab Application

After the Portal Frame is stood up, ensure that the column line up to the Base Cleat already fixed to concrete. Match the holes of the column web punching to the holes of the Base Cleat. Secure with appropriate fastening type as per the Engineering Plans. Brace the Frame as per the “Guide to the Installation of Temporary Bracing” guide.

NOTE: BUILDING CONFIGURATION IS INDICATIVE ONLY. REFER TO ENGINEERING PLANS FOR ACTUAL BUILDING CONFIGURATION AND SPECIFICATIONS.

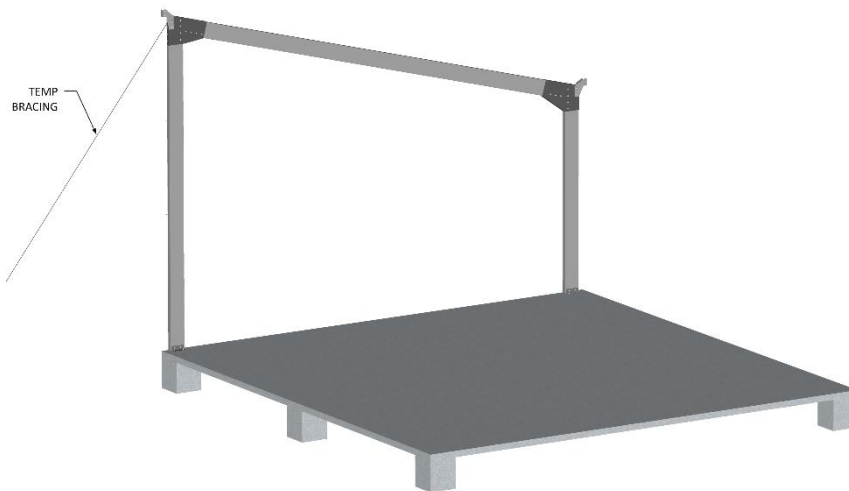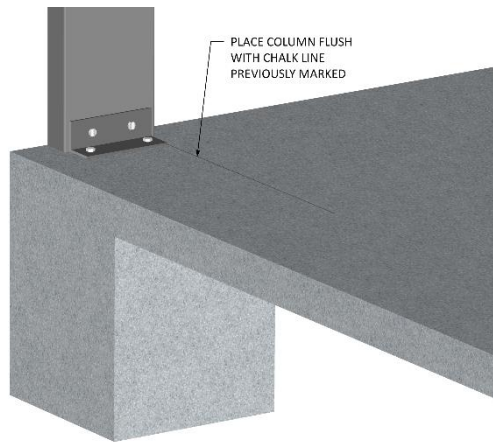


FIRST PORTAL FRAME
REFER TO 'GUIDE TO THE INSTALLATION OF THE TEMPORARY BRACING'
FRAME CONFIGURATION ARE INDICATIVE ONLY, REFER TO ENGINEERING PLANS FOR ACTUAL BUILDING CONFIGURATION

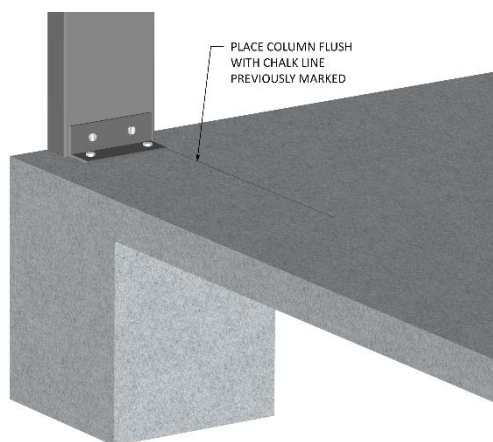


22 Installation of Endwall Mullion

INSTALLATION OF END WALL MULLION

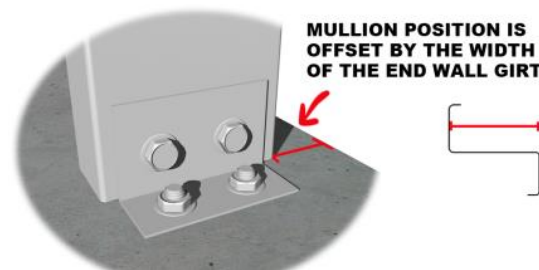

Fix the base cleat to the outer web base of a single Endwall Mullion with Fastening Type as per Engineering Plans. For double Endwall Mullion application, fix the base cleat to the inner web of each column. The Endwall Mullion location is offset by the width of the end wall girt from the edge of the slab and is positioned perpendicular to the Rafter. Drill holes through the base cleat attached to each column to the concrete and secure with appropriate Fastening Type as per Engineering Plans. Attach the longer leg of the Mullion Fixing Angle (MFA) bracket to the top end of the Mullion on the outer web face with the shorter leg of the MFA attached to the outer web face of the Rafter with the Fastening Type specified on the Engineering Plans. The number of Mullions varies and is specified on the Engineering Plans.


TIP: The Endwall Mullion flange being perpendicular to the rafter may not necessarily be adjacent to the rafter as the distance of the Endwall Mullion is determined by the width of the end wall girt from the edge of the slab. Hence, the shorter leg of Mullion Fixing Angle is attached to the rafter web for the longer web to take up the gap.

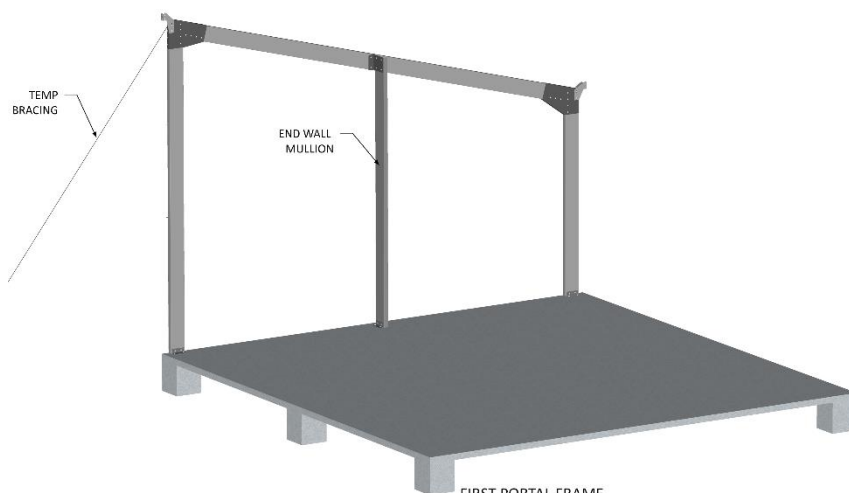

REFER TO 'GUIDE TO THE INSTALLATION OF THE TEMPORARY BRACING'
FRAME CONFIGURATION ARE INDICATIVE ONLY, REFER TO ENGINEERING PLANS FOR ACTUAL BUILDING CONFIGURATION


23 Standing The Second Portal Frame Assembly

Repeat the procedure in “Standing The First Portal Frame Assembly” Chapter.


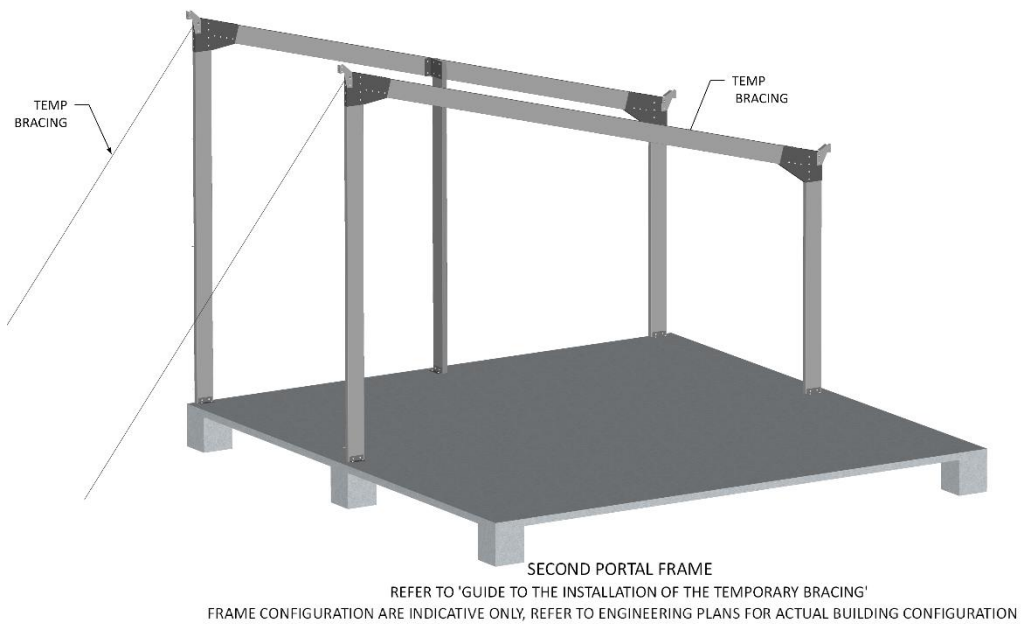


24 Standing All Portal Frame Assembly


Repeat the procedure in “Standing The First Portal Frame Assembly” Chapter

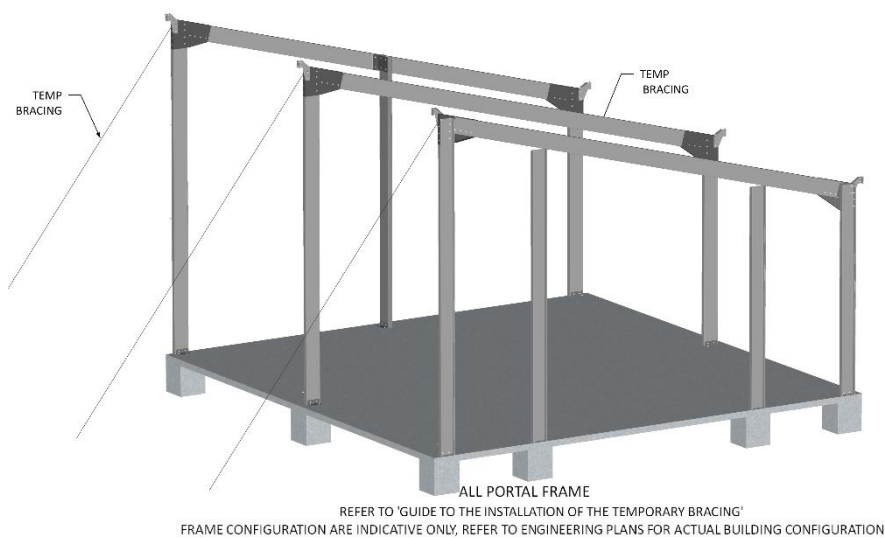


25 Fitting of C-Eave Purlin at End Column

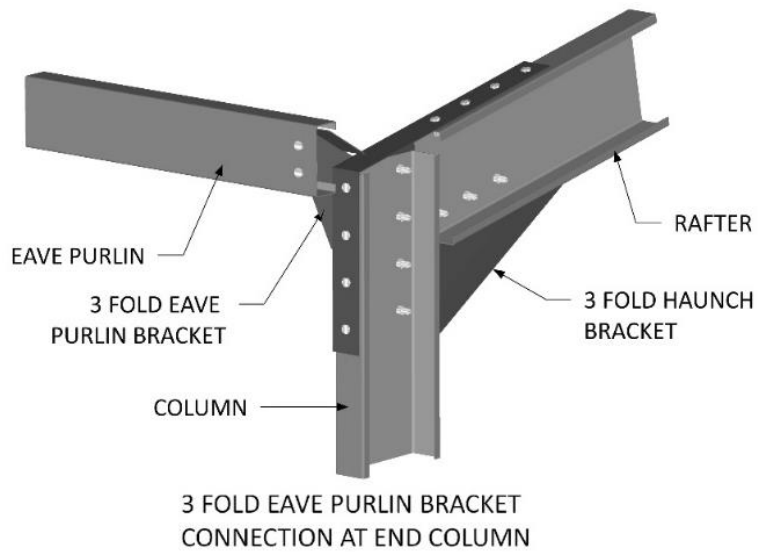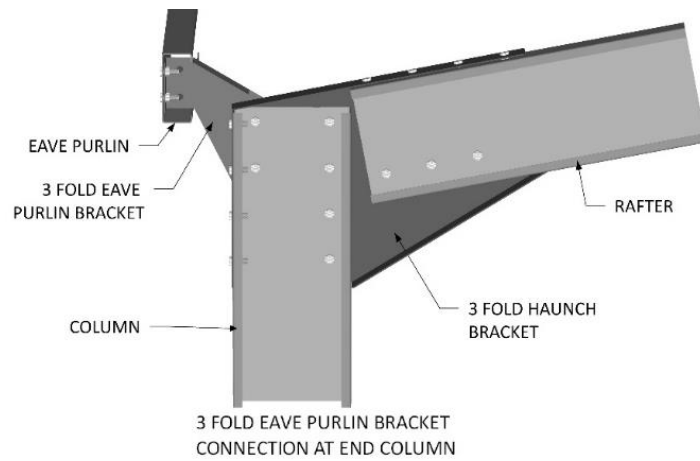


26 Fitting of C-Eave Purlin at Intermediate Column

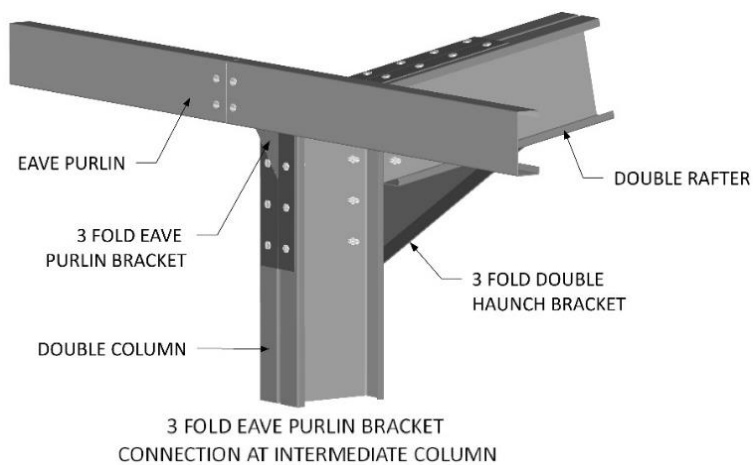

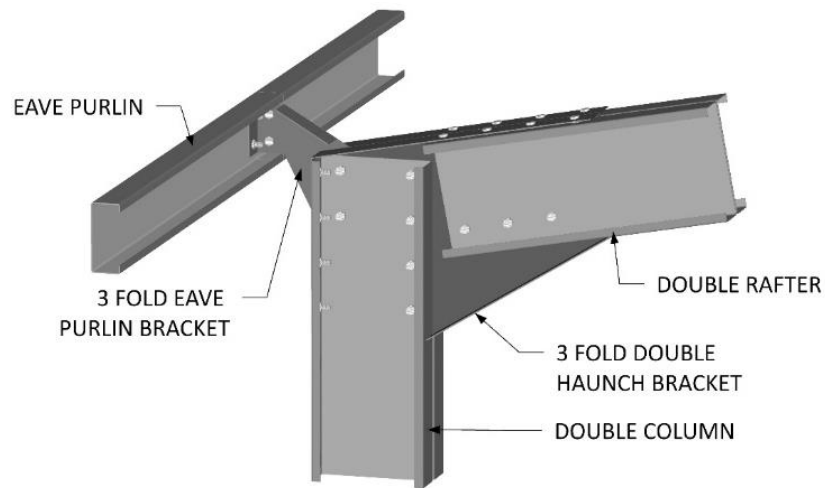


3 FOLD EAVE PURLIN BRACKET
CONNECTION AT INTERMEDIATE COLUMNS

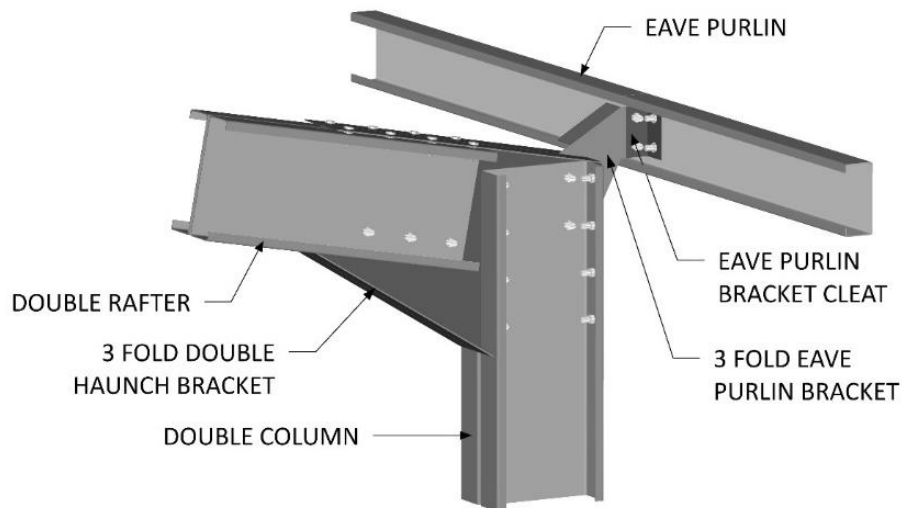

EAVE PURLIN BRACKET CLEAT
CONNECTION AT INTERMEDIATE COLUMN

Attach the C-Eave Purlin to the Eave Purlin Bracket at End Column with bolts. Attach the C-Eave Purlin to the Eave Purlin Bracket and Eave Purlin Bracket Cleat at Intermediate Column. If a joint is required in the intermediate column, joint should be butt joint with 2 bolts each side of the Eave Purlin. Refer to Engineering Plans on the height and fastening specifications of the C-Eave Purlin. Repeat this procedure to the other columns.

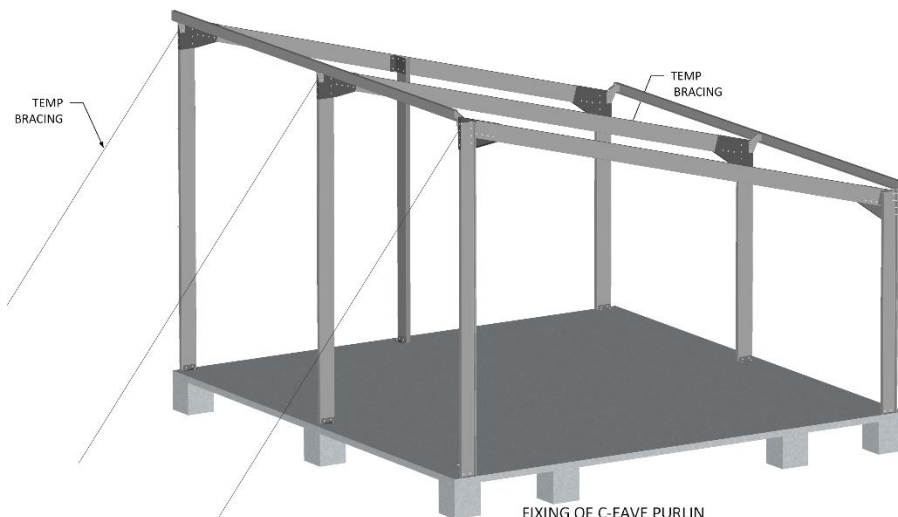

FIXING OF C-EAVE PURLIN



REFER TO 'GUIDE TO THE INSTALLATION OF THE TEMPORARY BRACING'


FRAME CONFIGURATION ARE INDICATIVE ONLY, REFER TO ENGINEERING PLANS FOR ACTUAL BUILDING CONFIGURATION

27 Fixing of Roof Purlins

Lift the pre-joined roof purlins into the rafters to line up with the temporary screws of the rafters for the purlin location. Roof purlin ends to flush with the outer face of the rafters on gable endwalls. Attach the roof purlins with one screw per connection initially. Ensure that endwall rafters and all intermediate rafters are plumb prior to purlins being permanently attached. Refer to Engineering Plans for purlin spacing. If roof strap bracing is required, fix into position as per Engineering Plans prior to laying sheets on the roof.

TIP: Purlin spacing is not necessarily the same as the girt spacing so it is imperative to refer to the Engineering Plans for girt specifications.

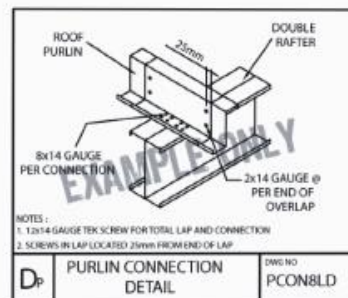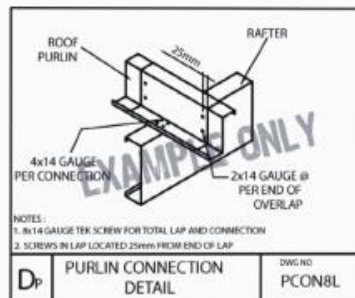


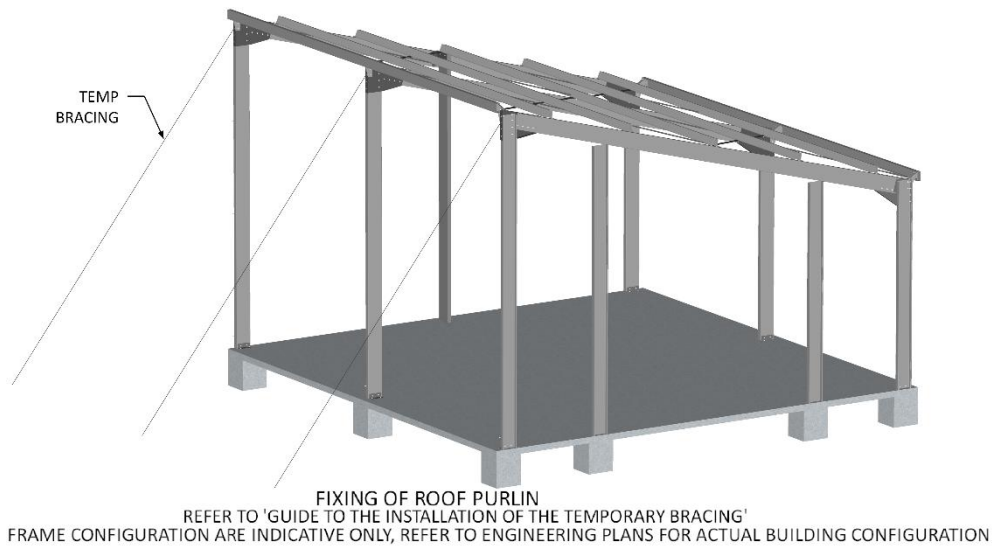


28 Fixing of Endwall Girts

End wall girt to finish flush with the outer face of the end columns. Attach the end girt with end girt bracket to the column flange. Lift the wall girts in between the end columns. If endwall mullion is present, attach the girt directly to the flange of the endwall mullion. Ensure that the end columns are plumb prior to the girt being permanently attached. Refer to Engineering Plans for girt spacing and lap. If wall strap bracing is required, fix into position as per Engineering Plans prior to laying sheets on the wall.

TIP: Purlin spacing is not necessarily the same as the girt spacing so it is imperative to refer to the Engineering Plans for girt specifications.

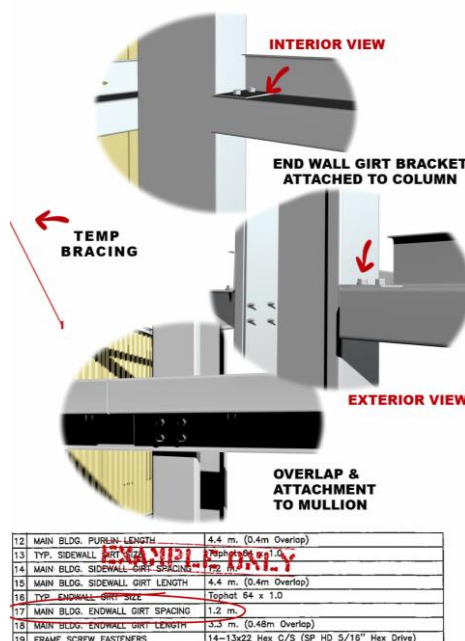


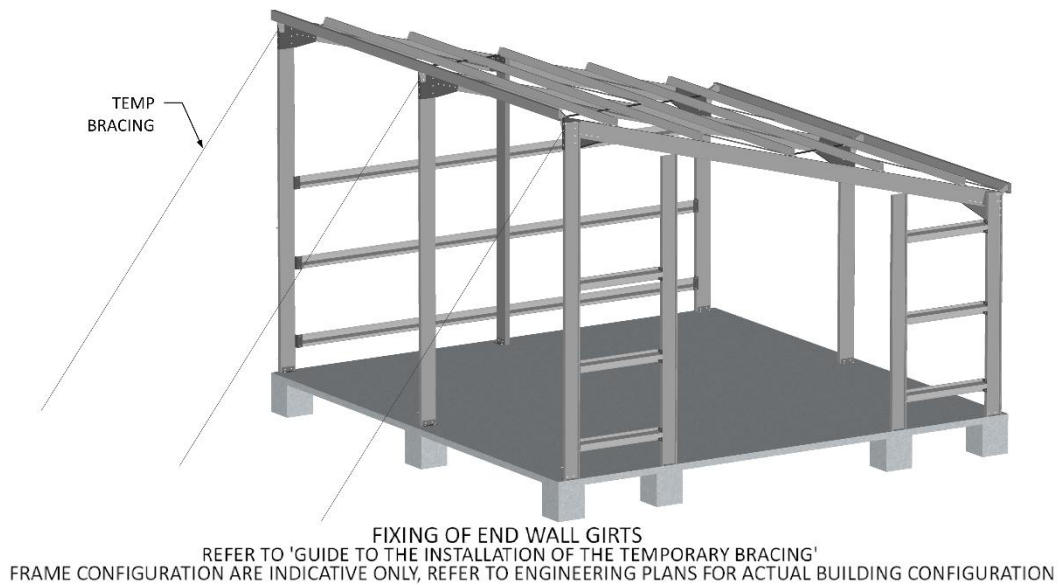


29 Fixing of Sidewall Girts

Fit the pre-assembled sidewall girts to the column flange to line up with the temporary screws in the columns for the girt location. The first girt being 250mm above the floor level and spacing as per Engineering plans. Sidewall girt to flush with the outer face of the end columns which is equal to the length of the concrete slab. Attach girts with one screw per connection initially. Ensure that end column and all intermediate columns are plumb prior to girts being permanently attached. Refer to Engineering Plans for girt spacing and framing screw specifications. If wall strap bracing is required, fix into position as per Engineering Plans prior to laying sheets on the wall.

TIP: Girt spacing is not necessarily the same as the purlin spacing so it is imperative to refer to the Engineering Plans for girt specifications

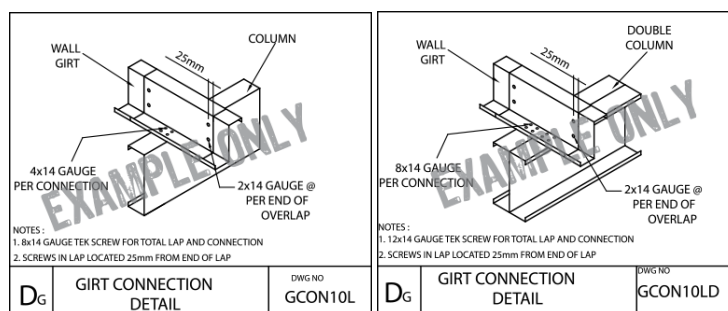

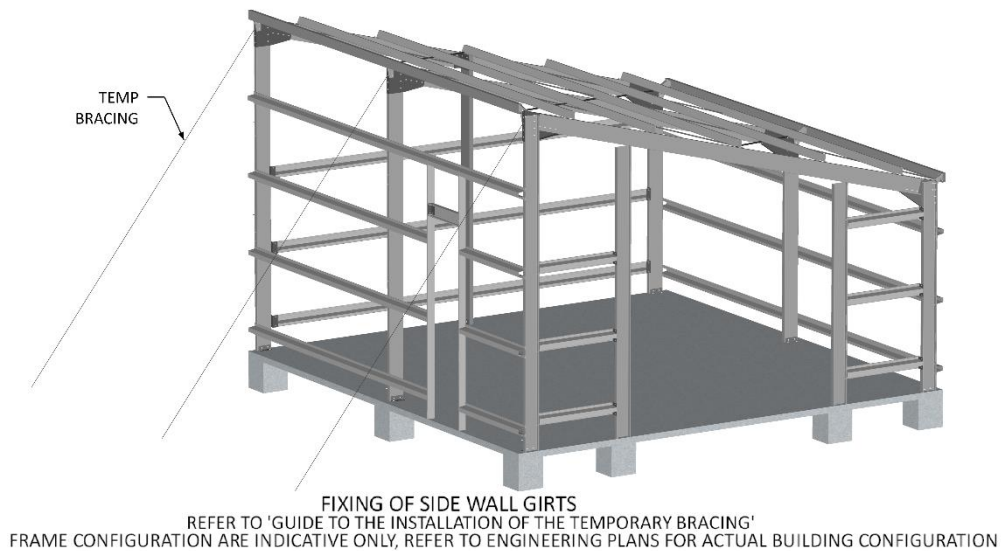



30 Fixing of Strap Bracing

Fix Wall Strap Bracing from the base of Column flange to the top flange of the next Column, diagonally, as required.


Fix Roof Strap Bracing from the lower end of the Rafter on the tophat lip purlin or Z flange purlin to the ridge end of the Rafter on the tophat lip purlin or Z flange purlin as required. Refer to the Engineering Plans on the specifications and exact locations of the bracing strap on both Rafters and Columns.


TIP: Refer to Engineering Plans for layout of the wall strap brace of window and door openings.

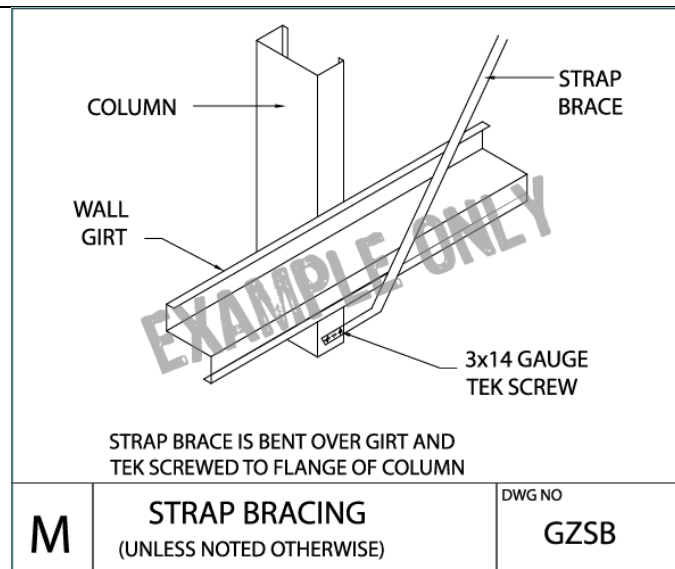

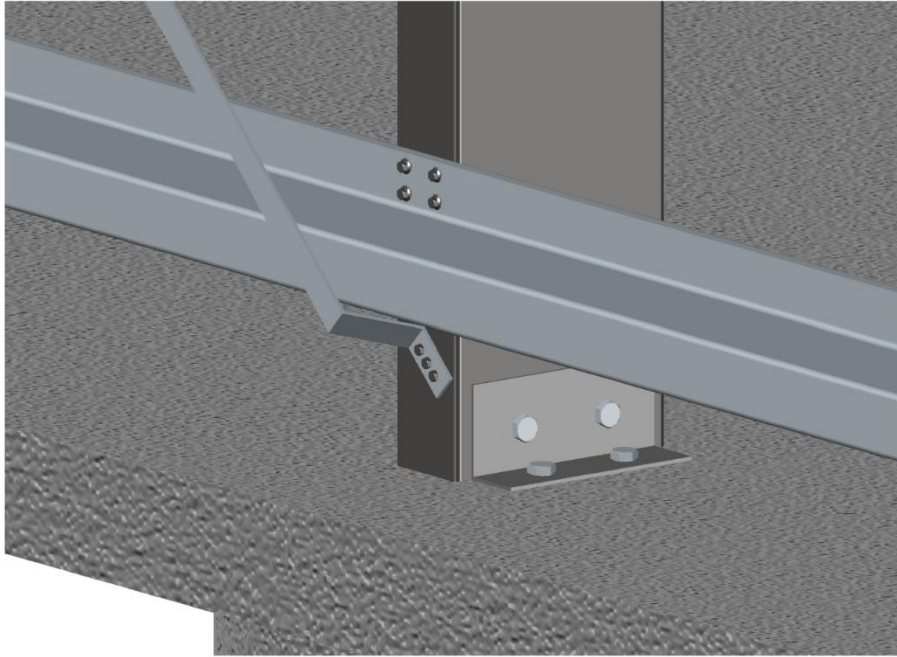

FIXING STRAP BRACE TO WALL

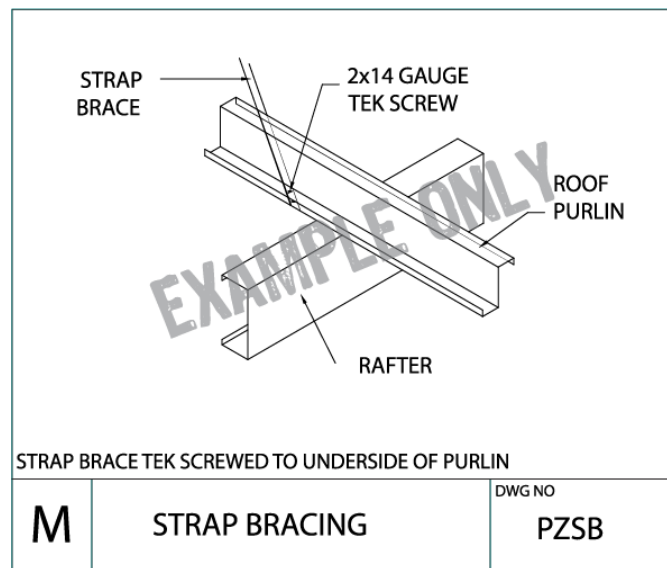

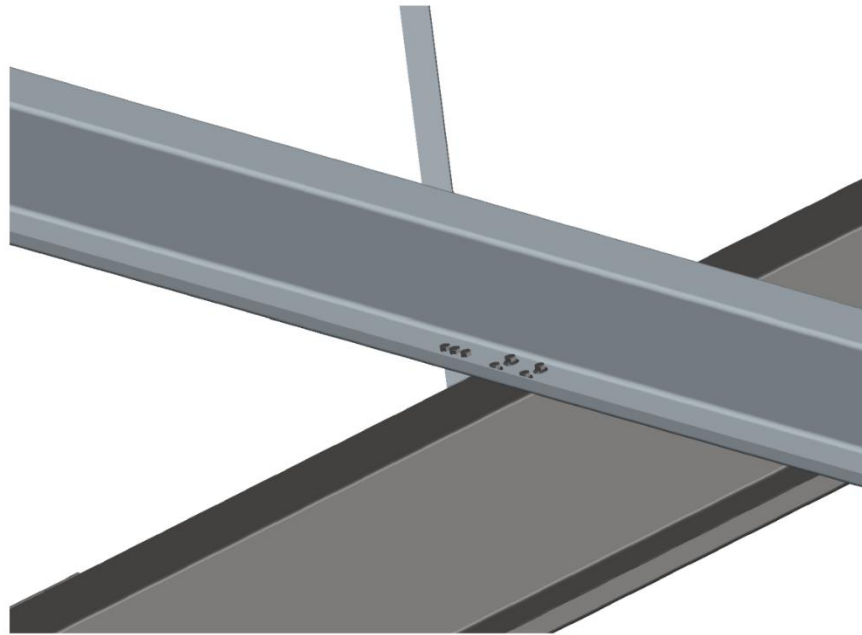

FIXING STRAP BRACE TO ROOF

31 Installation of Endwall Roller Door Frame


NOTE: Refer to Manufacturer's Specifications and Installation Procedure.

NOTE: *Installation of Endwall Roller Door and Associated Parts should occur AFTER flashings and downpipes have been fixed.*

POSITION – Endwall Roller Doors can be positioned on the endwall as required. If the position overlaps the location of the endwall mullion(s), mullion(s) can be moved fractionally ensuring that the maximum span of the endwall girt is not structurally compromised. Any wall strap bracing affected by the position of the opening will need to be adjusted or moved to satisfy structural requirements.

OPENING SIZE – Refer to Manufacturer's Specifications on how to determine the Opening Size. Opening size is smaller than the Roller Door size due to allowance of door tracks and the roller drum. Once the opening size is determined, mark the position of the C-Purlin door jambs on the slab.


END WALL ROLLER DOOR COLUMN CONNECTIONS

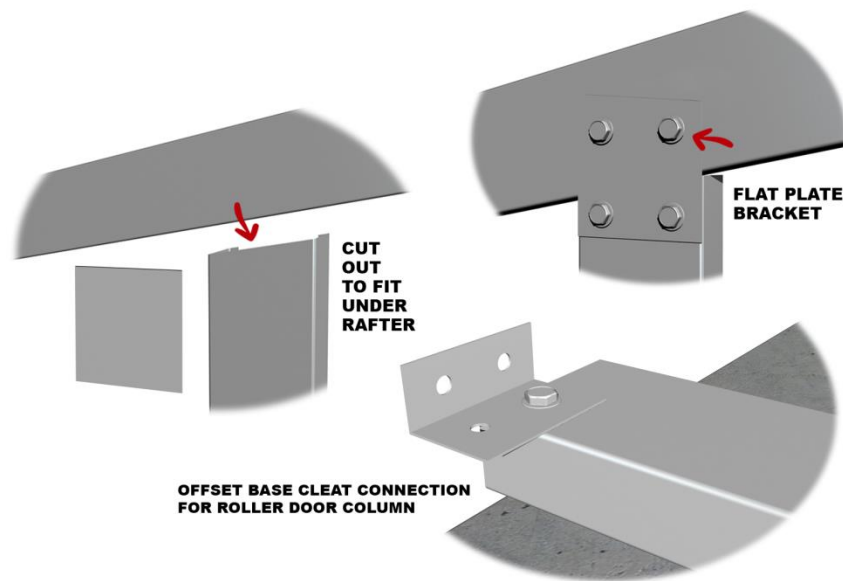

END WALL ROLLER DOOR COLUMN TO RAFTER CONNECTION

ROLLER DOOR JAMBS – The orientation of the Roller Door Jamb is the same as a single Frame Column and Rafter where the web faces inside the building. Attach a base cleat bracket to the outer web of the door jamb. Ensure that the base cleat is offset to allow for the roller door track. Position the door jamb vertically as per the opening width mark on the slab. Chalk line the door jamb to the underside of the rafter following the roof pitch. Cut the marked line on the ground with a drop saw or angle grinder. Attach to the top cut portion a mullion fixing Angle halfway to allow for the other half of the mullion fixing angle to attach to the rafter. Reposition the jamb vertically to sit under the rafter flushed to the outer web of the rafter and flushed to the outer edge of the slab. Drill holes through the pre-installed base cleat and masonry anchor the base cleat to the slab. Plumb the Door Jamb and attach to the outer web of the rafter. Refer to the Engineering Plans for the fastening type, size and quantity to the bracket and to the slab.

GABLE END WALL ROLLER DOOR CONNECTIONS

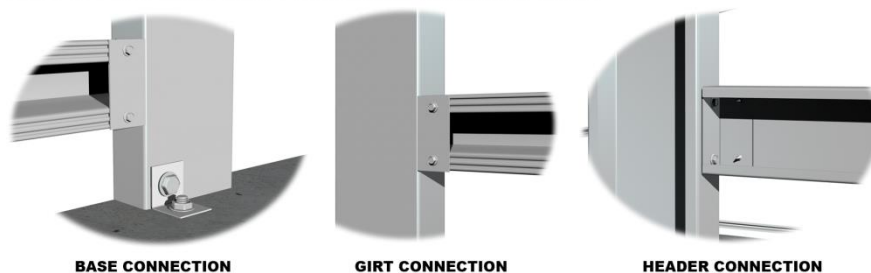

TIP: In some instances, Frame Column can be used as Endwall Roller Door Jamb if the roller door is required to be offset on either the farthest Left End or Right End of the building.

TIP: Where exact fit roller door option on the endwall is selected, endwall girt is not required. Where exact fit option is not selected, endwall girt is fitted between the roller door and frame columns supported by the endwall girt bracket attached to the flanges of the jamb and the frame

column.

ROLLER DOOR HEADER – The height of the door header is equivalent to the door height opening required as previously determined. Measure and mark the height of the header to the two sides of the door jambs already in place. Fit the C-Purlin Door Header between the jambs with endwall girt brackets and framing screws. Finish the wall sheeting around the roller door and trim.

TRIM – After the opening has been permanently fixed, complete the trims and flashings around the perimeter of the opening.

ENDWALL ROLLER DOOR – Refer to Manufacturer's Specifications and Installation Procedure for the installation of the Endwall Roller Door and Associated Parts.

32 Installation of Endwall Roller Door Frame

NOTE: Refer to Manufacturer's Specifications and Installation Procedure for the installation of the Endwall Roller Door and Associated Parts.


NOTE: Installation of Endwall Roller Door Jambs and Header should occur **AFTER** the Apex and Knee brace are in place and **BEFORE** Endwall girts are fixed.

NOTE: Installation of Endwall Roller Door and Associated Parts should occur **AFTER** the flashings and downpipes have been fixed.

POSITION – Endwall Roller Doors can be positioned on the endwall as required. *If the position overlaps the location of the endwall mullion(s), mullion(s) can be moved fractionally ensuring that the maximum span of the endwall girt is not structurally compromised.* Any wall strap bracing affected by the position of the opening will need to be adjusted or moved to satisfy structural requirements.

OPENING SIZE – Refer to Manufacturer's Specifications and Installation Procedure for the Installation of the Endwall Roller Door and Associated Parts. Opening size is smaller than the Roller Door width due to allowance of door tracks and the roller drum. Once the opening size is determined, mark the position of the C-Purlin door jambs on the slab.


END WALL ROLLER DOOR COLUMN CONNECTIONS

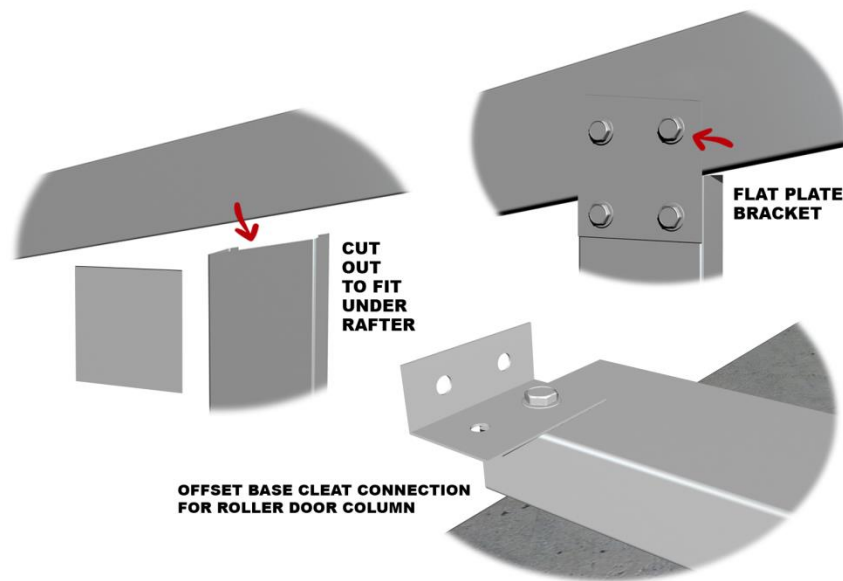

END WALL ROLLER DOOR COLUMN TO RAFTER CONNECTION

ROLLER DOOR JAMBS – The orientation of the Roller Door Jamb is the same as a single Frame Column and Rafter where the web faces inside the building. Attach a base cleat bracket to the outer web of the door jamb. Ensure that the base cleat is offset to allow for the roller door track. Position the door jamb vertically as per the opening width mark on the slab. Chalk line the door jamb to the underside of the rafter following the roof pitch. Cut the marked line on the ground with a drop saw or angle grinder. Attach to the top cut portion a mullion fixing Angle halfway to allow for the other half of the mullion fixing angle to attach to the rafter. Reposition the jamb vertically to sit under the rafter flushed to the outer web of the rafter and flushed to the outer edge of the slab. Drill holes through the pre-installed base cleat and masonry anchor the base cleat to the slab. Plumb the Door Jamb and attach to the outer web of the rafter. Refer to the Engineering Plans for the fastening type, size and quantity to the bracket and to the slab.

GABLE END WALL ROLLER DOOR CONNECTIONS

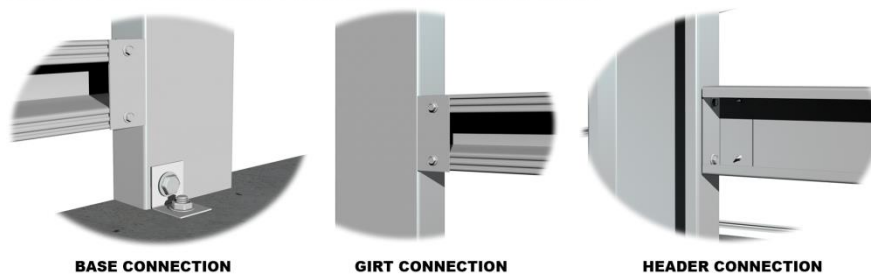

TIP: In some instances, the frame column can be used as Endwall Roller Door Jamb if the roller door is located near the Left End or Right End of the building.

TIP: *Where exact fit roller door option on the endwall is selected, endwall girt is not required. Where exact fit option is not selected, endwall girt is fitted between the roller door column and frame column flanges attached with end girt bracket.*

ROLLER DOOR HEADER – The height of the door header is equivalent to the door height opening required as previously determined. Measure and mark the height of the header to the two sides of the door jambs already in place. Fit the C-Purlin Door Header between the jambs with endwall girt brackets and framing screws. Finish the wall sheeting around the roller door and trim.

TRIM – After the opening has been permanently fixed, complete the trims and flashings around the perimeter of the opening.

ENDWALL ROLLER DOOR – *Refer to Manufacturer's Specifications and Installation Procedure for the installation of the Endwall Roller Door and Associated Parts.*

33 Installation of Sidewall Roller Door Frame

NOTE: *Refer to Manufacturer's Specifications and Installation Procedure for the installation of the Sidewall Roller Door and Associated Parts.*


NOTE: *Installation of Sidewall Roller Door Jambs and Header should occur after the sidewall girts are in place.*

NOTE: *Installation of Sidewall Roller Door and Associated Parts should occur after the flashings and downpipes have been fixed.*

POSITION – Sidewall Roller Doors can be positioned between two intermediate columns within a "bay". *If the roller door is to be offset to either Left or Right of the bay, a minimum of 100mm has to be allowed for from the door opening to the inner web or lip face of the nearest column for the roller door brackets.* Any wall strap bracing affected by the position of the opening will need to be adjusted or moved to satisfy structural requirements.

OPENING SIZE – *Refer to Manufacturer's Specifications and Installation Procedure for the installation of the Endwall Roller Door and Associated Parts.* Opening size is smaller than the Roller Door width due to allowance of door tracks and the roller drum. Once the opening size is determined, mark the position of the door jambs in the slab. Wall girts may need to be cut to suit the opening width.

SIDE WALL ROLLER DOOR JAMB CONNECTIONS

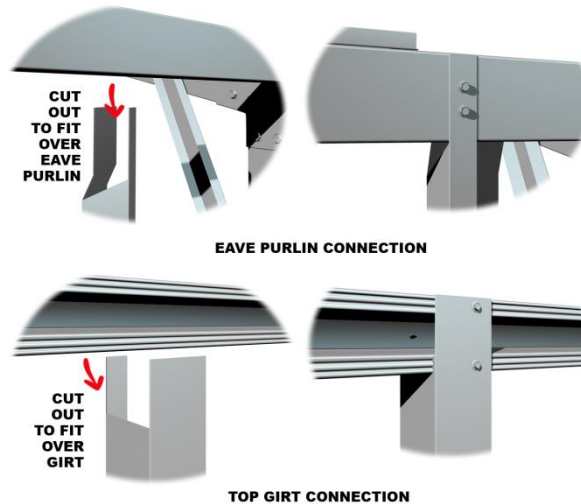

ROLLER DOOR JAMBS – Depending on the height of the sidewall roller door, the notched top part of the jamb can either be attached to the next wall girt or to the eave purlin whichever is applicable. The door jambs are supplied in stock lengths and has to be cut and notched out to suit the next support above the door. The web part of the jamb has to be notched out and the 2 upright legs attached to two sides of either the wall girt or the eave purlin whichever is applicable. Ensure that the longer leg of the jamb faces inside the building. Ensure that the jambs are plumb prior to fixing the base cleat at the bottom of the roller door jamb and masonry anchor to the slab. Fit both Left Hand and Right Hand roller door jambs as per marked position.

SIDE WALL ROLLER DOOR CONNECTIONS



ROLLER DOOR HEADER – The height of the door header is equivalent to the door height opening required as previously determined. Measure and mark the height of the header to the two sides of the door jambs already in place. Fit the C-Purlin Door Header between the jambs with endwall girt brackets and framing screws. Trim the wall sheeting already in place to suit the required opening size.


TRIM – After the opening has been permanently fixed, complete the trims and flashings around the perimeter of the opening.

SIDEWALL ROLLER DOOR – Refer to Manufacturer's Specifications and Installation Procedure for the installation of the Sidewall Roller Door and Associated Parts.

SIDE WALL ROLLER DOOR



Z-Jamb is used as Sidewall Roller Door Jamb when a standard folder door jamb is not structurally sufficient. Z-Jamb will be allowed for in a job as required.

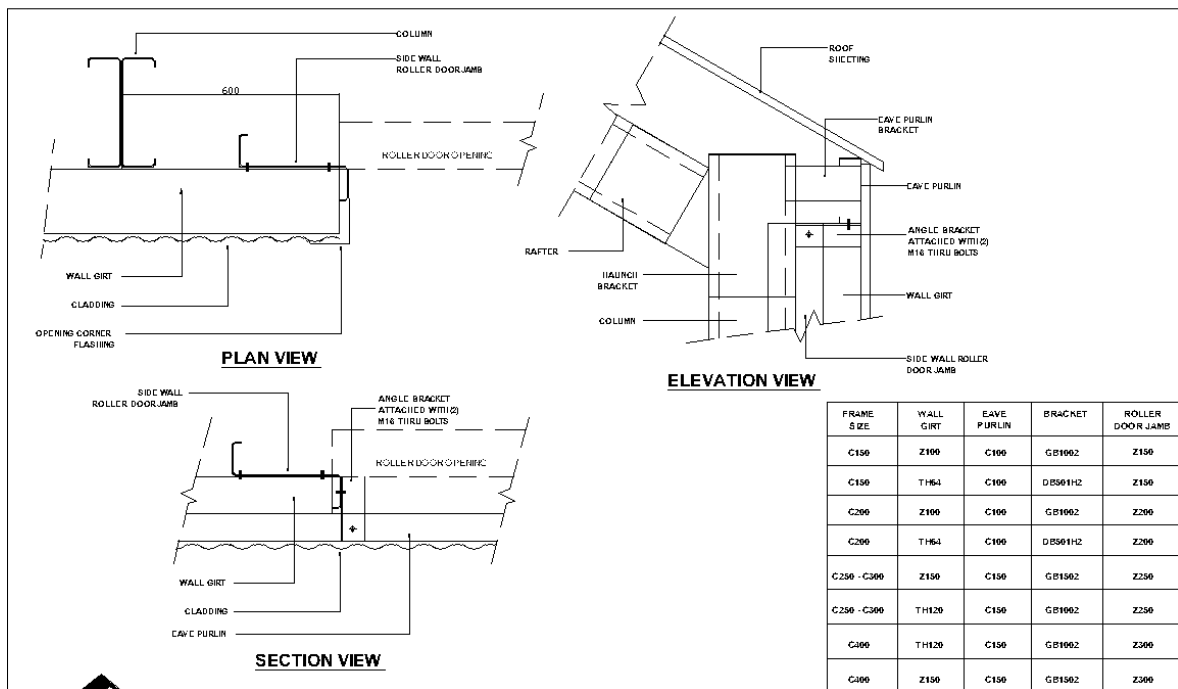

34 Fixing of Sidewall Sheets

Lay the sidewall sheets and ensure that the female rib faces away from the prevailing weather.

For Open Leanto with slab stepdown, ensure that the bottom of the main sidewall sheet is approximately 25mm past the base of the column which would make the wall sheets go past the slab by 25mm after the wall frame is stood up to prevent water coming in the building.

For Enclosed Leanto, slab stepdown is optional, therefore, the main sidewall sheets sit on the Leanto slab.


Fix the wall sheets to wall girts one at a time with fastening type and specifications as per the Engineering Plans. Use a straight edge chalk line to ensure screws are in a straight line. Each end wall sheet to finish flush to the outer face of the end column.

NOTE: If wall strap brace or fly brace is required, fix into position first prior to fixing the wall

sheeting. Refer to the Engineering Plans for specifications and location of the wall strap brace and fly brace.

***NOTE:** Prior to fixing the open bay header sheets into position, it is imperative to check that both sidewalls and endwalls are plumb and straight by using a string line along the inner face of the columns.*

***CAUTION:** It is imperative to sweep the edge of the metal with a soft hair brush to remove “swarf” whenever the sheets are cut. Any remaining swarf on the sheets after cutting will cause rusting and may void the warranty.*

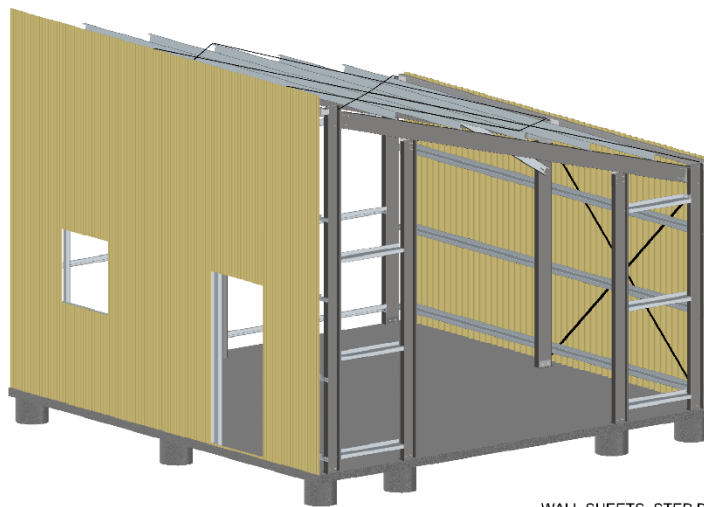

WALL SHEETS, STEP DOWN, WALL GIRTS, ROOF PURLINS, EAVE PURLINS, KNEE AND APEX BRACES SPECIFICATIONS AND LOCATIONS ARE INDICATIVE ONLY. REFER TO ENGINEERING PLANS FOR ACTUAL CONFIGURATION.

FIXING OF SIDE WALL SHEETS

35 Fixing of Endwall Sheets

Lay the endwall sheeting and ensure that the female rib faces away from the prevailing weather. *Use the recommended Endwall Sheeting Layout to ensure that the number of sheeting allowed for fits exactly.* Attach the Endwall sheets at a time with the fastening type and specifications as per Engineering Plans. Use a straight edge or chalk line to ensure screws are placed in a straight line.


The endwall sheets should overlap the slab by 25mm to prevent water coming in the building. The bottom of the endwall sheets should line up with the bottom of the sidewall sheets. Fix the endwall sheets to wall girts one at a time with fastening type and specifications as per the Engineering Plans. Each last endwall sheet to finish flush to the outer face of the side wall girt.

Once all the endwall sheets are fixed into position, trim the top portion of the endwall sheets to flush with or slightly below the top of the purlins to follow the roof line with an electric nibbler or tin snips. Tek screw the trimmed top portion of the endwall sheets to the top lip of the rafter.

If there is an opening on the gable endwall, install and fix all the full wall sheets first and leave out the sheets where the opening is to be positioned. Once the location of the opening is established, fix all the sheets below or above the opening whichever is applicable.

TIP: Do not fit an opening until all sides of the wall frame are cladded.

CAUTION: It is imperative to sweep the edge of the metal with a soft hair brush to remove “swarf” whenever the sheets are cut. Any remaining swarf on the sheets after cutting will cause rusting and may void the warranty.

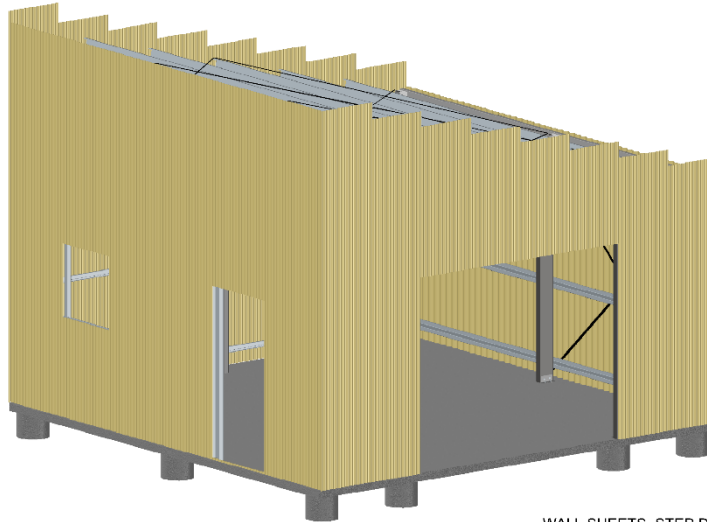

WALL SHEETS, STEP DOWN, WALL GIRTS, ROOF PURLINS, EAVE PURLINS, KNEE AND APEX BRACES SPECIFICATIONS AND LOCATIONS ARE INDICATIVE ONLY. REFER TO ENGINEERING PLANS FOR ACTUAL CONFIGURATION.

FIXING OF END WALL SHEETS


36 Fixing of Gutter

Gutter is to be fitted before the roof sheets are installed.

CAUTION: Use caution in handling cut steel as it is extremely sharp.


TIP: Gutter and gutter brackets specifications may vary by location or area.

Position the gutter brackets spaced at 1.0meter maximum spacing as a guide. Mark a chalk line from top of the wall sheets down to determine the height of the brackets, highest point of gutter bracket to line up with the top of wall sheeting. Attach the gutter brackets to the ribs of the wall sheets with pop rivets with a slight downward slope towards the downpipe. Apply silicone to joints of gutter prior to installation. Clip gutter into gutter brackets and ensure that the gutter overhang the end wall by the profile width of the sheets. Fold gutter bracket tags into the gutter to hold it into position.

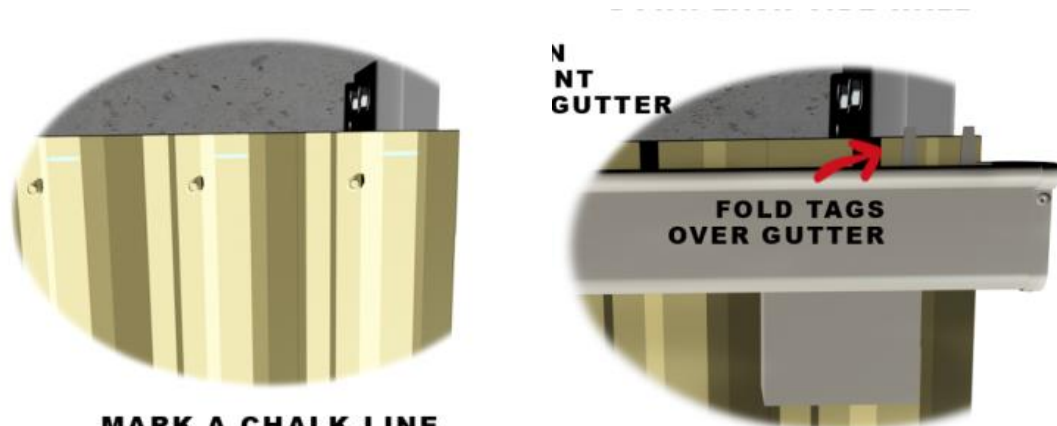


STOP ENDS & DOWNPIPE NOZZLES

TRACE INSIDE OF DOWNPIPE NOZZLE ONTO GUTTER
AND CUT OUT USING TIN SNIPS

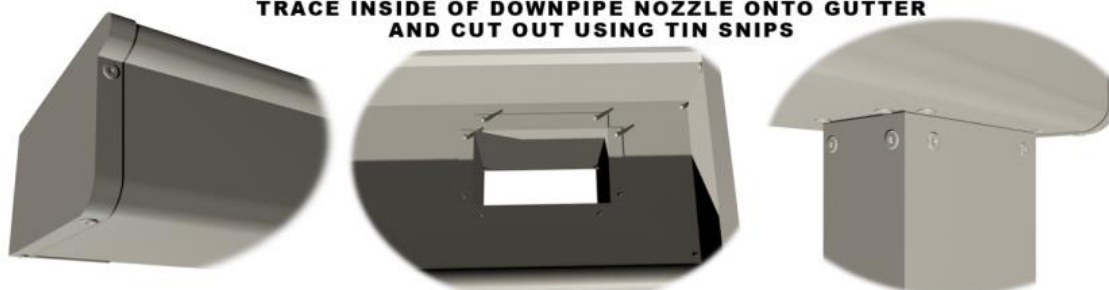

ATTACH STOP ENDS AND DOWNPIPE NOZZLE WITH SILICONE & RIVETS

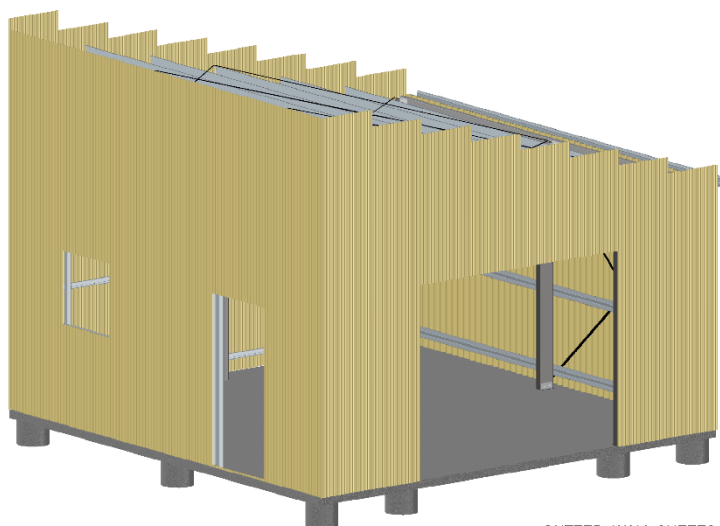

GUTTER, WALL SHEETS, STEP DOWN, WALL GIRTS, ROOF PURLINS, EAVE PURLINS, KNEE AND APEX BRACES SPECIFICATIONS AND LOCATIONS ARE INDICATIVE ONLY. REFER TO ENGINEERING PLANS FOR ACTUAL CONFIGURATION.

FIXING OF GUTTER

37 Fixing of Roof Sheets

Fix the roof sheeting and allow approximately half the gutter width or 50mm (whichever is lesser) to overhang into the gutter. Ensure that the female rib of the cladding faces away from the prevailing winds. Fix the roof sheeting with the required number of roof screws. Refer to Engineering Plans for roof specifications, roof screw specifications and spacing.

NOTE: Prior to fixing the roof sheeting into position, it is imperative to check that both sidewalls and endwalls are plumb and straight by using a string line along the inner face of the columns. Re-prop intermediate columns if necessary which helps the structure become more rigid while working on the roof.


NOTE: If skylight is required, it must be installed with safety precautions. Safety wire mesh is a requirement under the skylights. Refer to manufacturer's specifications and installation procedure for additional information.


TIP: Prior to fixing the roof sheeting to the purlins, turn up the sheeting along the ridge line with pliers for added protection from rain. This process is called "weathering" the sheets.

TIP: If roof strap brace or fly brace is required, fix into position first prior to fixing the roof sheeting. Refer to the Engineering Plans for specifications and location of the roof strap brace and fly brace.

TIP: If roof insulation is required, it must be installed first prior to roof sheets being fixed into position. Refer to manufacturer's specifications and installation procedure for additional information.

CAUTION: It is imperative to sweep the edge of the metal with a soft hair brush to remove "swarf" whenever the sheets are cut. Any remaining swarf on the sheets after cutting will cause rusting and may void the warranty.

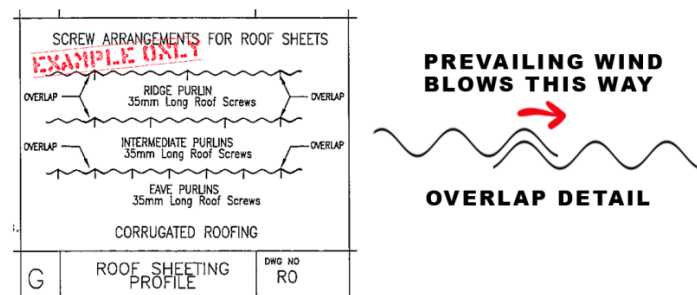

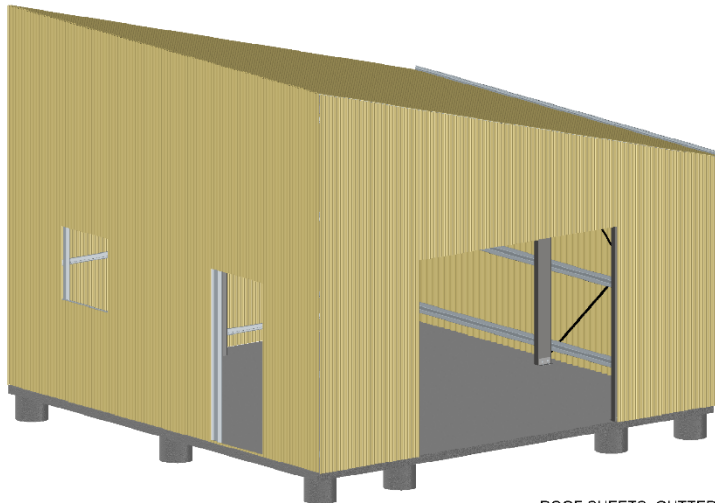

FIXING OF ROOF SHEETS


ROOF SHEETS, GUTTER, WALL SHEETS, STEP DOWN, WALL GIRTS, ROOF PURLINS, EAVE PURLINS, KNEE AND APEX BRACES SPECIFICATIONS AND LOCATIONS ARE INDICATIVE ONLY. REFER TO ENGINEERING PLANS FOR ACTUAL CONFIGURATION.

38 Fixing of Flashings

CORNER FLASHING – Fix all corner flashings with pop rivets or wall screws as required. A wall screw or 35mm rivet from each end of corner flashing is required. Ensure that all the corner flashings are flush to the bottom of the wall sheets. Ensure that flashing is secure and watertight. Run a bead of silicone on the overlap and joints of the corner flashing.

True

CORNER AND OPENING FLASHINGS

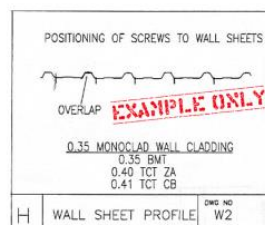

BUILDING CORNER FLASHING


SCREWS AS PER WALL SHEETING PROFILE AND 35mm FROM EACH END



ROLLER DOOR OPENING


True

CORNER AND OPENING FLASHINGS

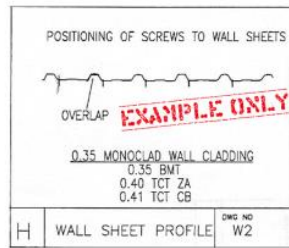

BUILDING CORNER FLASHING

SCREWS AS PER WALL SHEETING PROFILE AND 35mm FROM EACH END

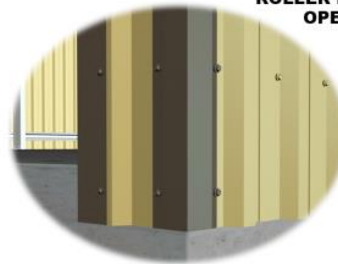


ROLLER DOOR OPENING

OPENING FLASHING – Fix all opening flashings with pop rivets or wall screws as required. A wall screw or 35mm rivet from each end of opening flashing is required. Ensure that all opening flashings are mitered at corners of openings. Ensure that flashing is secure and watertight. Run a bead of silicone on the overlap and joints of the opening flashing.

BARGE CAP – Fix the first left barge cap in position starting from the ridge line with pop rivets or wall screws whichever is applicable. Ensure that the top of the barge cap is in line with the centre of the ridge cap on the same angle as the roof pitch. Fix the vertical leg of the barge cap with pop rivets or wall screws to the ribs of the wall sheets. Fix the horizontal leg of the ridge cap to the roof purlins with roof screws. Fix the second right barge cap into position and allow a 10mm overlap of the horizontal leg on the roof from the center of the ridge cap. Mark a vertical cutting line on the vertical face of the barge cap with a spirit level. Trim the excess barge cap to the marked line with tin snips to a plumb cut. Fasten the right barge cap in position with pop rivets or wall screws using the same “Roof Sheeting Profile” guide. Fold down the 10mm overlap of the horizontal leg over to the left barge cap. Run a bead of silicone on the overlap and joints of the barge cap.



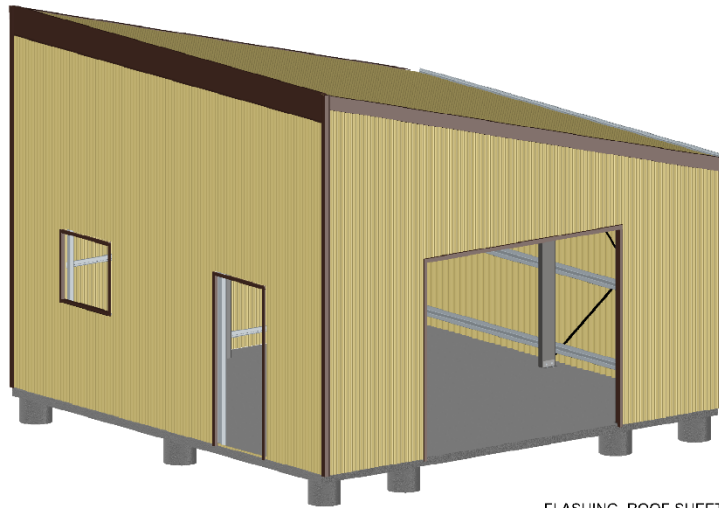

FIXING OF FLASHING

FLASHING, ROOF SHEETS, GUTTER, WALL SHEETS, STEP DOWN, WALL GIRTS, ROOF PURLINS, EAVE PURLINS, KNEE AND APEX BRACES SPECIFICATIONS AND LOCATIONS ARE INDICATIVE ONLY. REFER TO ENGINEERING PLANS FOR ACTUAL CONFIGURATION.

39 Fixing of Openings




FIXING OF DOORS AND WINDOWS

DOORS, WINDOWS, FLASHING, ROOF SHEETS, GUTTER, WALL SHEETS, STEP DOWN, WALL GIRTS, ROOF PURLINS, EAVE PURLINS, KNEE AND APEX BRACES SPECIFICATIONS AND LOCATIONS ARE INDICATIVE ONLY. REFER TO ENGINEERING PLANS FOR ACTUAL CONFIGURATION.

40 Fixing of Downpipe

Remove plastic coating from the downpipe. Fix downpipes to nozzle with pop rivets or wall screws whichever is applicable. The larger end of the downpipe is attached to the nozzle to allow for a correct water flow. A downpipe bracket called “astragal” can be formed by trimming and folding to suit the required shape. Alternately, a wall screw can be fixed from the inside of the building through the bottom sidewall girt into the downpipe.

ATTACHING THE DOWNPIPE

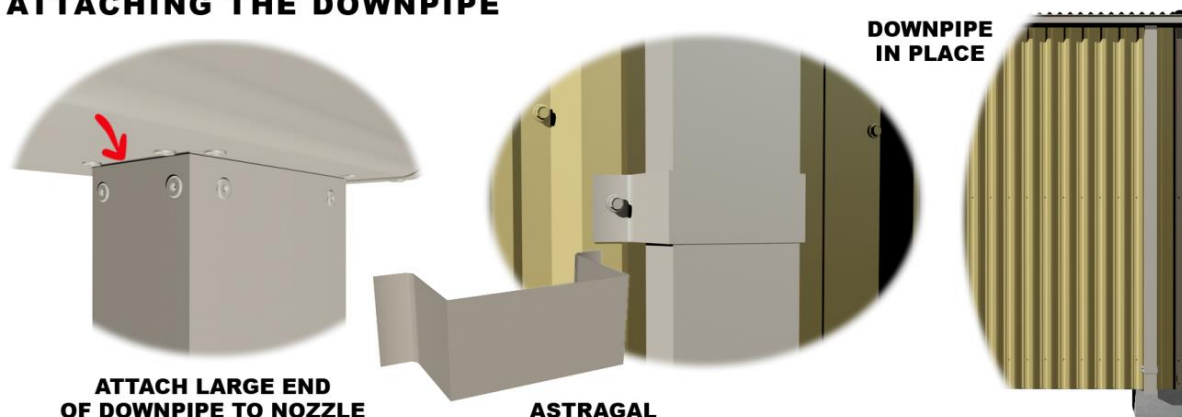

41 Installation of Window

NOTE: Refer to Manufacturer's Specifications and Installation Procedure.

NOTE: *Installation of Window(s) and Associated Parts should occur after the flashings and downpipes have been fixed.*

POSITION – Window(s) can be positioned anywhere between two intermediate frames on the sidewall and between endwall mullions on the endwall. Any wall strap bracing affected by the position of the opening will need to be adjusted or moved to satisfy structural requirements.

OPENING WIDTH – Refer to Manufacturer's Specifications on how to determine the Opening Width. Once the opening width is determined, mark the position of the window opening width on the sidewall girts. Once marked, wall girts are to be cut to suit the window opening width.


OPENING HEIGHT – Refer to Manufacturer's Specifications on how to determine the Opening Height. Once the opening height is determined, three different options are available on the window jamb installation depending on the requirements.

WINDOW JAMB – The window jamb material is always the same as the girt material. The three available options are as follows:


OPTION 1 – If the height of the window is EQUAL to the girt spacing, a window jamb is OPTIONAL. The top and bottom girt material can be used to support the window. The window jamb in this instance is NOT A REQUIREMENT for a Building Class 10a (Non-Habitable Building being a Private Garage, Shed or the like) but is a REQUIREMENT for Building Class 1a (Single Dwelling) or other similar Building Classifications.

OPTION 2 – If the height of the window is LESS than the girt spacing, a window jamb is a MUST. The jamb is to extend to the next girt below and above the window opening. The support above the window opening can either be a girt or an Eave Purlin whichever is applicable. For Z-Purlin jamb, notch the web and attach the 2 legs of the jamb to the 2 legs of the Z-Purlin girt. For a tophat jamb, notch the 2 sides and attach the lip and the hat of the jamb to the lip and the hat of the tophat girt or to the lip and web of a C-Eave Purlin. The girt between the 2 jambs is to be trimmed to suit the opening width.


OPTION 3 – If the height of the window is GREATER than the girt spacing, a window jamb is a MUST. The jamb is to extend to the next girt below and above the window opening. The support above the window opening can either be a girt or an Eave Purlin whichever is applicable. For Z-Purlin jamb, notch the web and attach the 2 legs of the jamb to the 2 legs of the Z-Purlin girt. For a tophat jamb, notch the 2 sides and attach the lip and the hat of the jamb to the lip and the hat of the tophat girt or to the lip and web of a C-Eave Purlin. The girt between the 2 jambs is to be trimmed to suit the opening width.

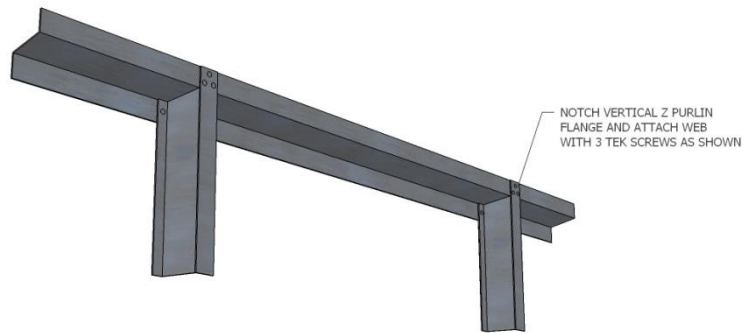

ATTACHMENT TO THE NEXT GIRT ABOVE AN OPENING

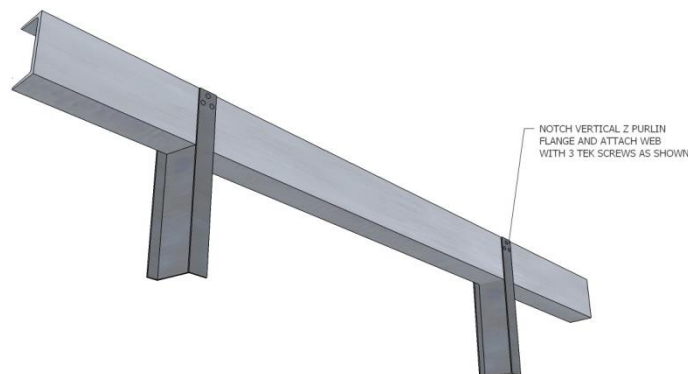

ATTACHMENT TO EAVE PURLIN


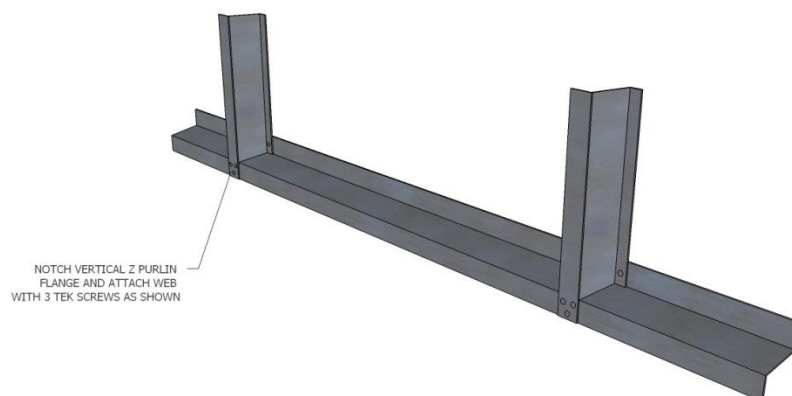


ATTACHMENT TO BOTTOM GIRT

TIP: Windows have a **REVEAL** or **FIN** which is approximately a 30mm protrusion from the centre of the window frame. This **REVEAL** or **FIN** fits between the girt and the wall sheet.

TRIM – After the opening has been permanently fixed, complete the trims and flashings around the perimeter of the opening.

WINDOWS EXAMPLES

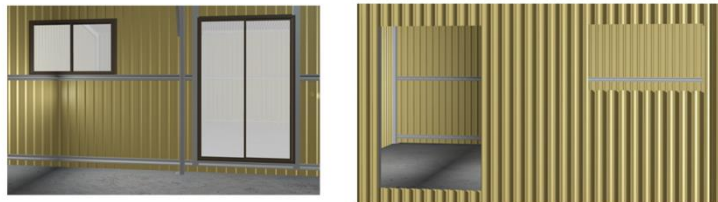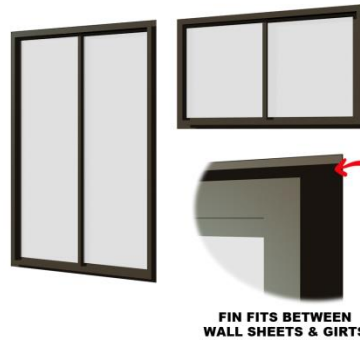

GABLE END WALL WINDOW OPENINGS



GABLE END WALL WINDOWS IN PLACE


42 Installation of Personal Access Door

NOTE: Installation of Personal Access Door Jamb(s) and Header(s) should occur **AFTER** the wall sheeting is completed and **BEFORE** flashings are fixed. The pre-installed side wall sheets will need to be cut to suit the personal access door opening location and size.


NOTE: Installation of Personal Access Door(s) and Associated Parts should occur after the flashings and downpipes have been fixed.

POSITION – Personal Access Door(s) can be positioned anywhere between two intermediate frames on the sidewall and between endwall mullions on the endwall. Any wall strap bracing affected by the position of the opening will need to be adjusted or moved to satisfy structural requirements.

OPENING SIZE – Refer to Manufacturer’s Specifications on how to determine the Opening Size. The PA Door size is normally equal to the opening size. Once the opening size is determined, mark the position of the door jambs on the slab and mark the width on the sidewall girts. Once marked, wall girts are to be cut to suit the PA door opening width.

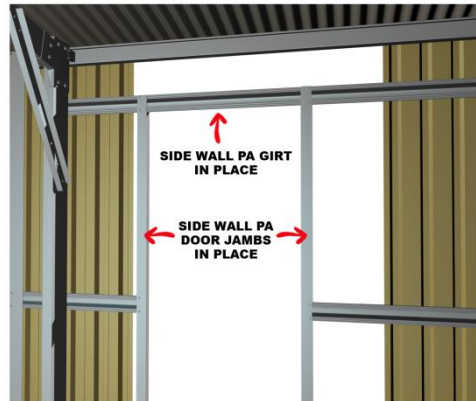


PERSONAL ACCESS DOOR JAMB – Depending on the height of the personal access door jamb, the notched top part of the jamb can either be attached to the next wall girt or to the eave purlin whichever is applicable. The door jambs are supplied in stock lengths and has to be cut and notched out to suit the next support above the door. The web part of the jamb has to be notched out and the 2 upright legs attached to two sides of either the wall girt or the eave purlin whichever is applicable. Ensure that the longer leg of the jamb faces inside the building. Ensure that the jambs are plumb prior to fixing the base cleat at the bottom of the personal access door jamb and masonry anchor to the slab. Fit both Left Hand and Right Hand personal access door jambs as per marked position.

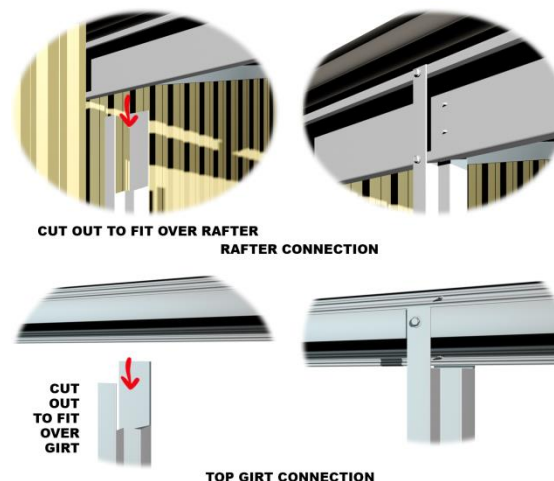


TIP: *There are two types of Personal Access door Jamb, rebated and non-rebated. The installation procedures for both types are exactly the same.*

PERSONAL ACCESS DOOR HEADER – The height of the door header is equivalent to the door height opening required as previously determined. Measure and mark the height of the PA door header to the two sides of the door jambs already in place. The total length of the header is equal to the door width plus twice the door jamb width. Mark on each side of the header a line to match the opening width. Notch out the web of the jamb as marked leaving the two legs. Fit and insert the Personal Door Header on each side of the jamb and fasten the two legs to the jambs with framing screws. Ensure that the open side of the door header faces up.

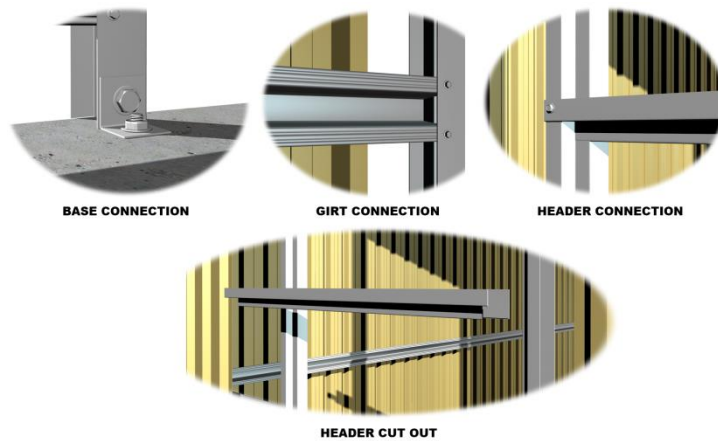

TRIM – After the opening has been permanently fixed, complete the trims and flashings around the perimeter of the opening.

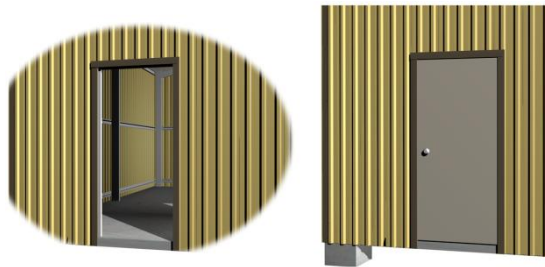

PRE-HUNG PERSONAL ACCESS DOOR JAMB – Depending on the height of the personal access door, the notched top part of the jamb can either be attached to the next wall girt or to the eave purlin whichever is applicable. The door jambs are supplied in stock lengths and have to be cut and notched out to suit the next support above the door. The web part of the jamb has to be notched out and the 2 upright legs attached to two sides of either the wall girt or the eave purlin whichever is applicable. Ensure that the longer leg of the jamb faces inside the building. Ensure that the jambs are plumb prior to fixing the base cleat at the bottom of the personal access door jamb and masonry anchor to the slab footing. Fit both Left Hand and Right Hand personal access door jambs as per marked position.

PRE-HUNG PERSONAL ACCESS DOOR – Refer to Manufacturer's Specifications and Installation Procedure for the Installation of the Pre-Hung Personal Access Door and Associated Parts.

43 Completion

Make a final check of the completed structure.

Ensure that all base cleats have been tightened down firmly.

Ensure that all bolts are complete and tightened.

Check that the roof and wall screws are complete and tightened.

Brush the completed structure down including the roof with a soft hair broom to remove any swarf (metal dust and fillings caused by an angle grinder).

Hose down the concrete slab to remove any particles, screws and rivets for safety.

STAND BACK AND CONGRATULATE YOURSELF ON A JOB WELL DONE!

TIP: DON'T FORGET TO PUT YOUR DISTRIBUTORSHIP STICKER ON